 
 
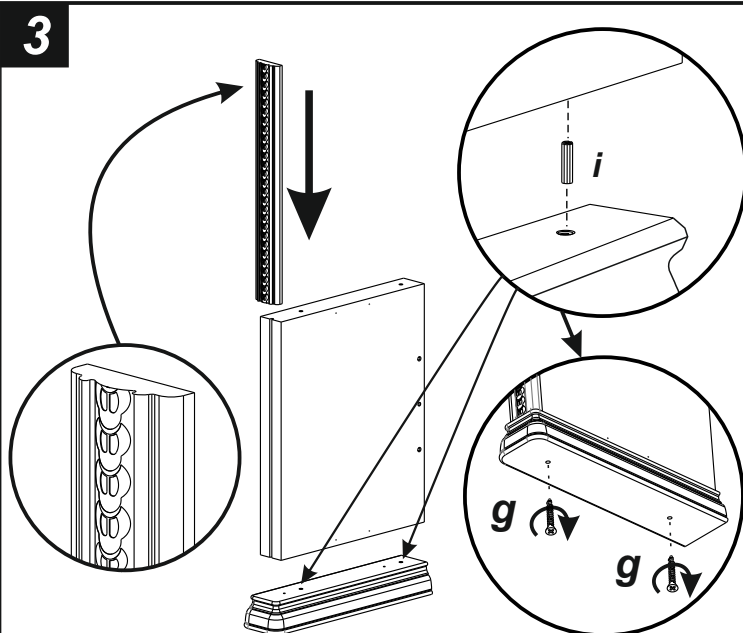 
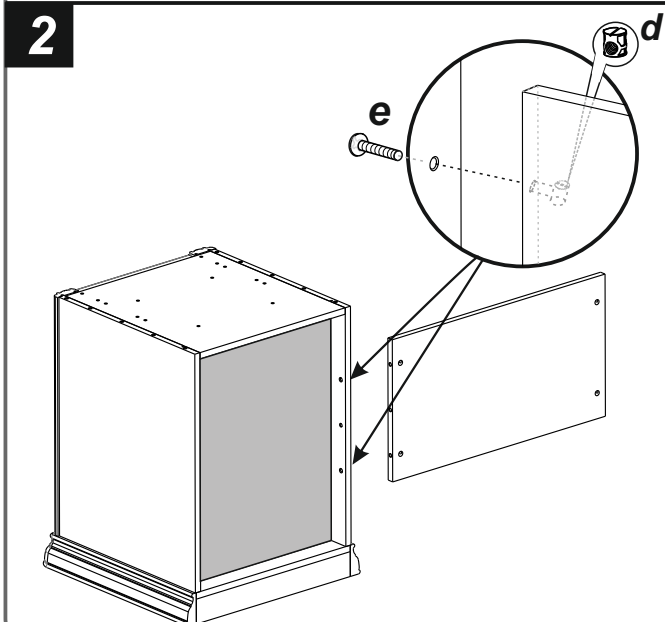 
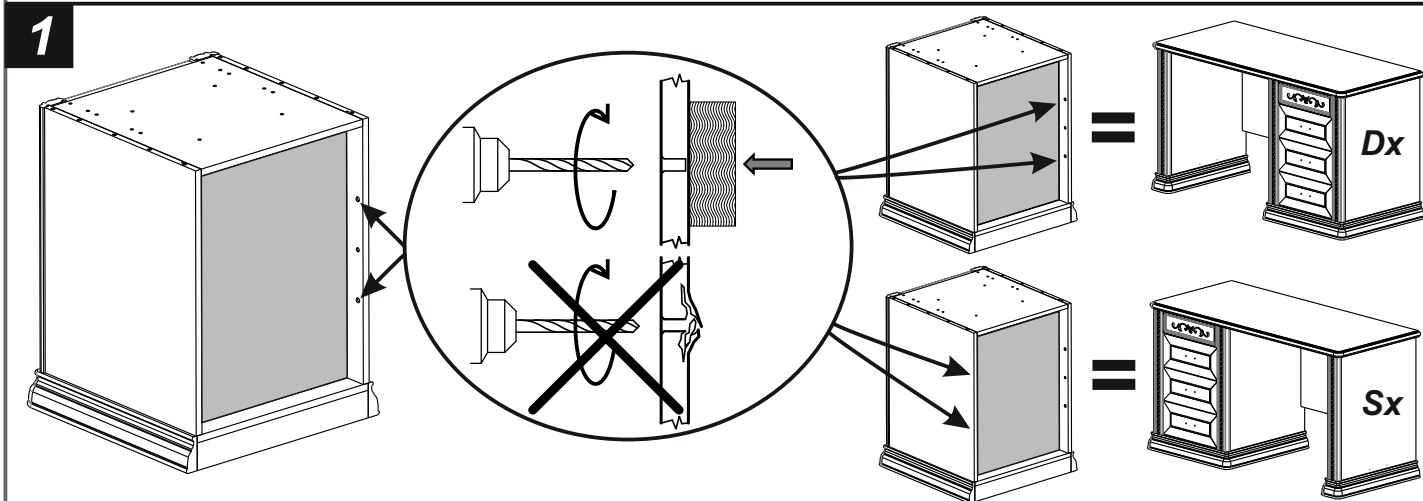 
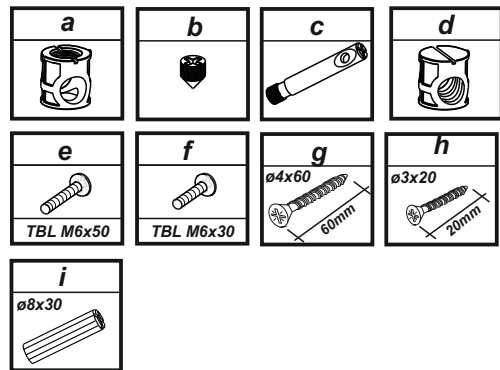 
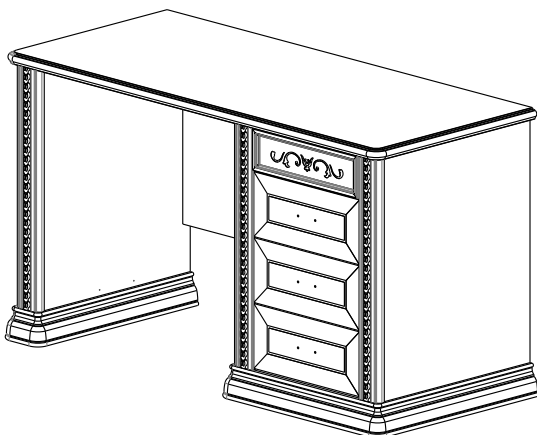 



# SIENA SCRITTOIO 3 CASSETTI

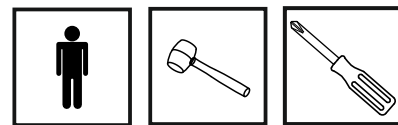


4

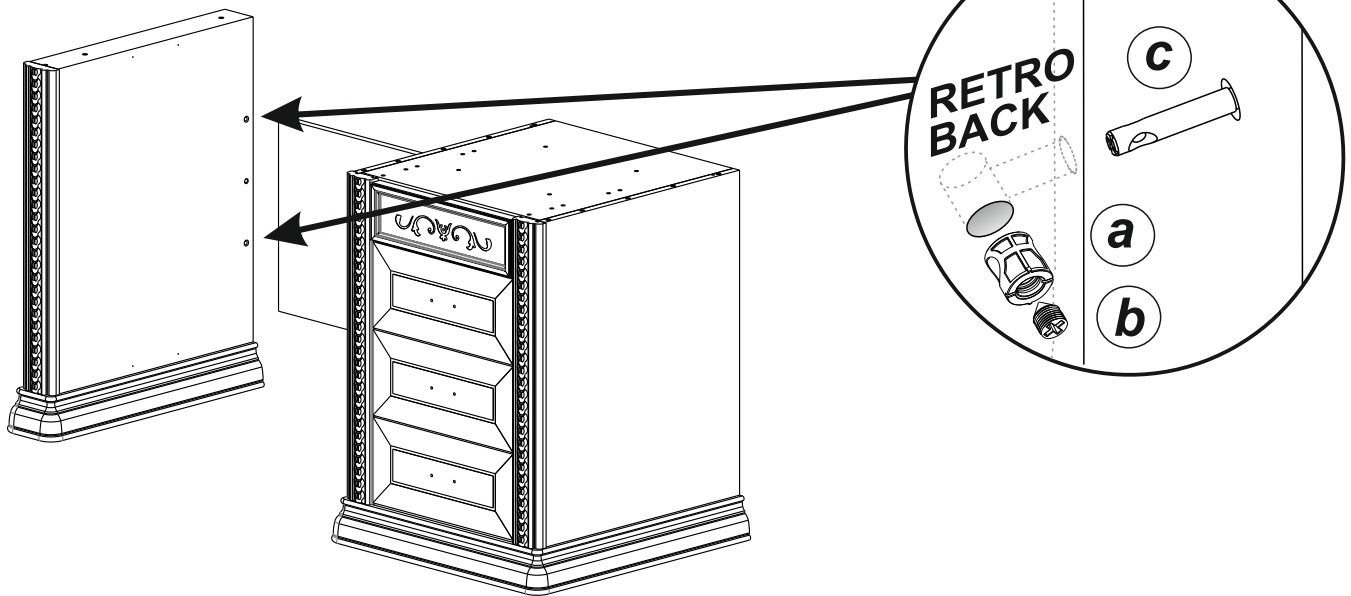


 
5

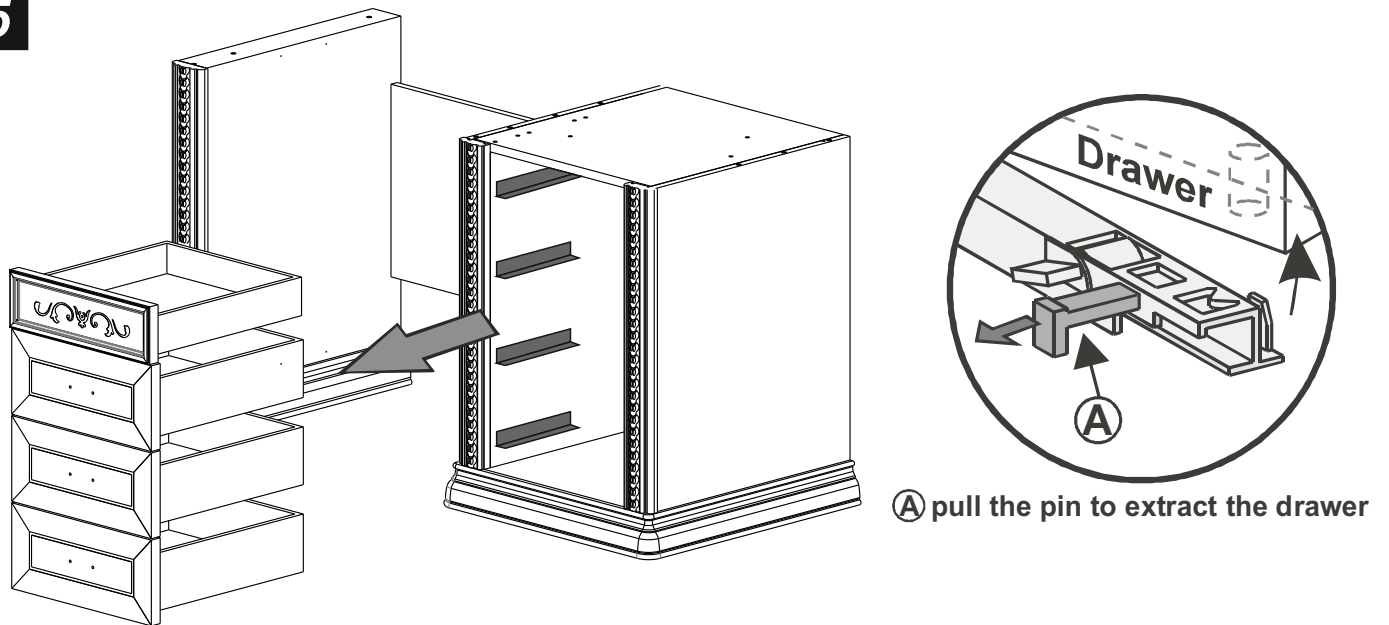




6

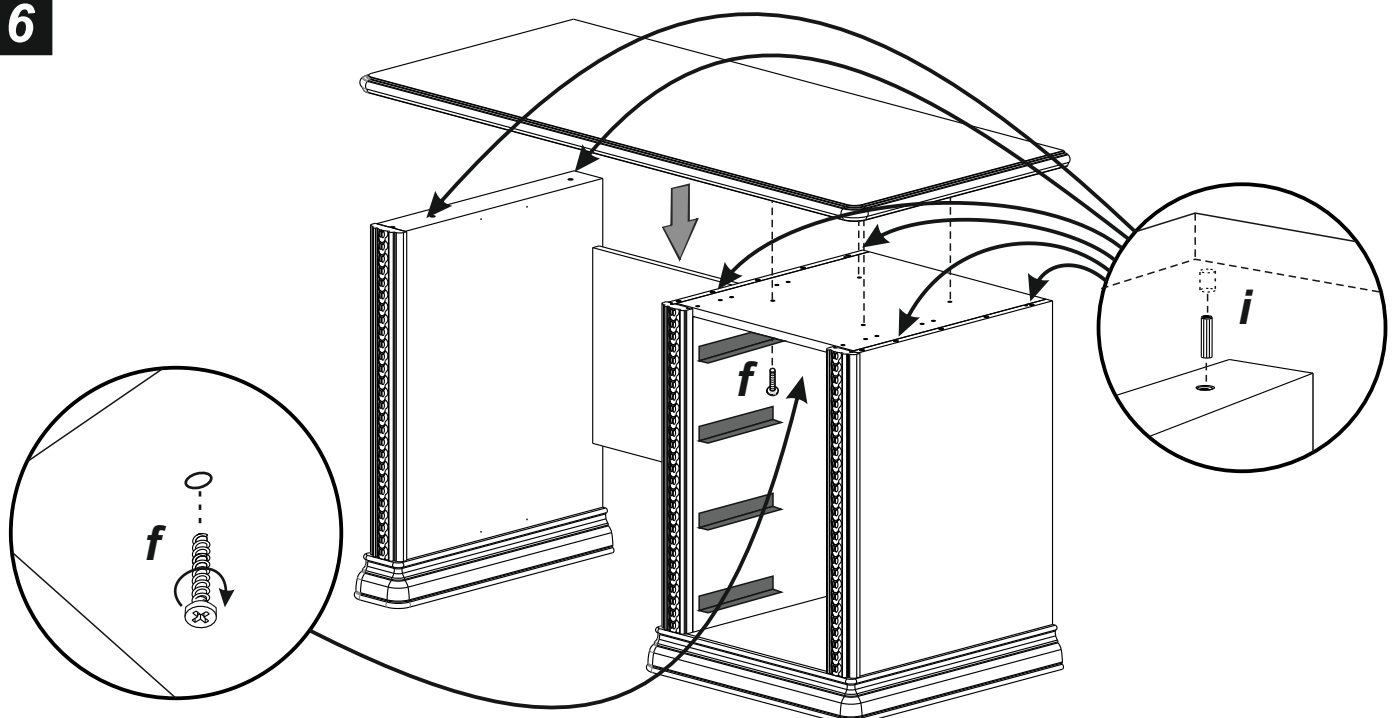 

7

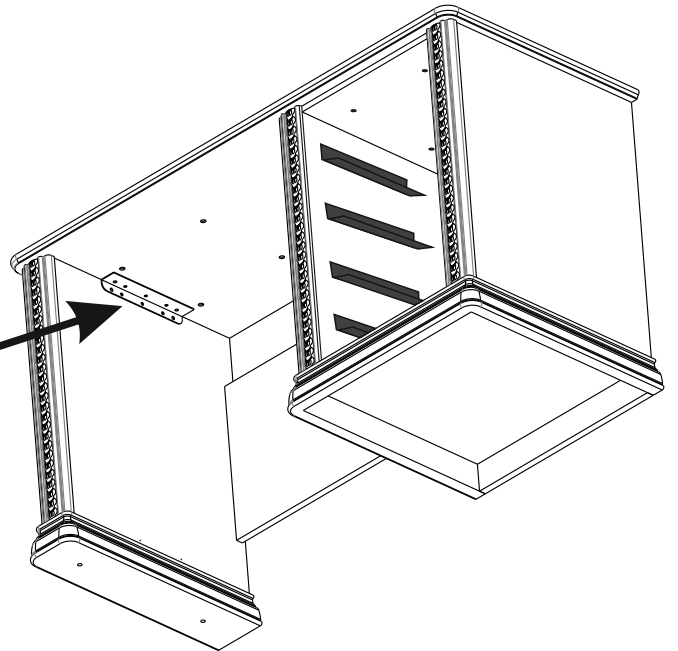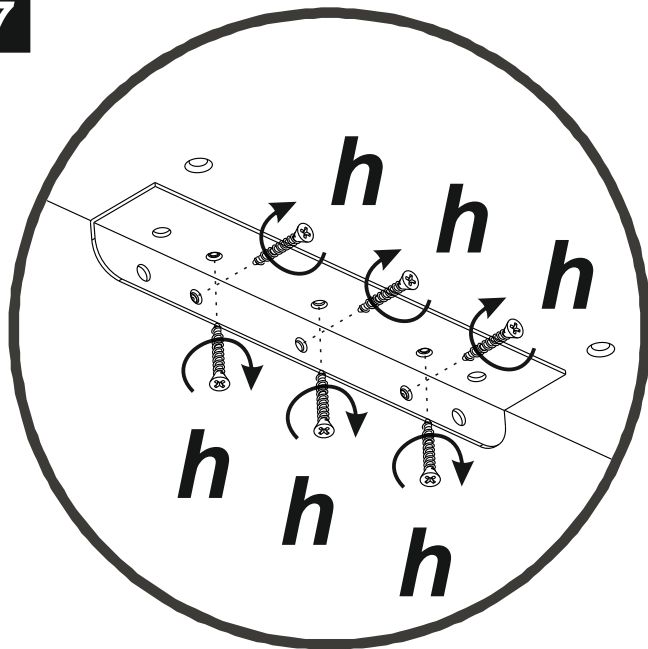  

8

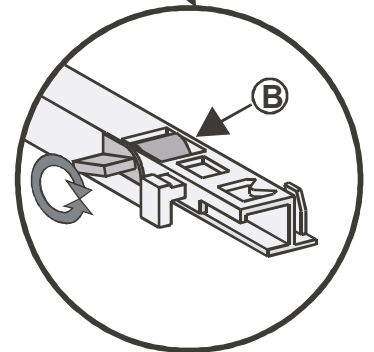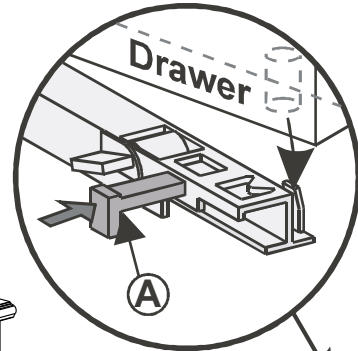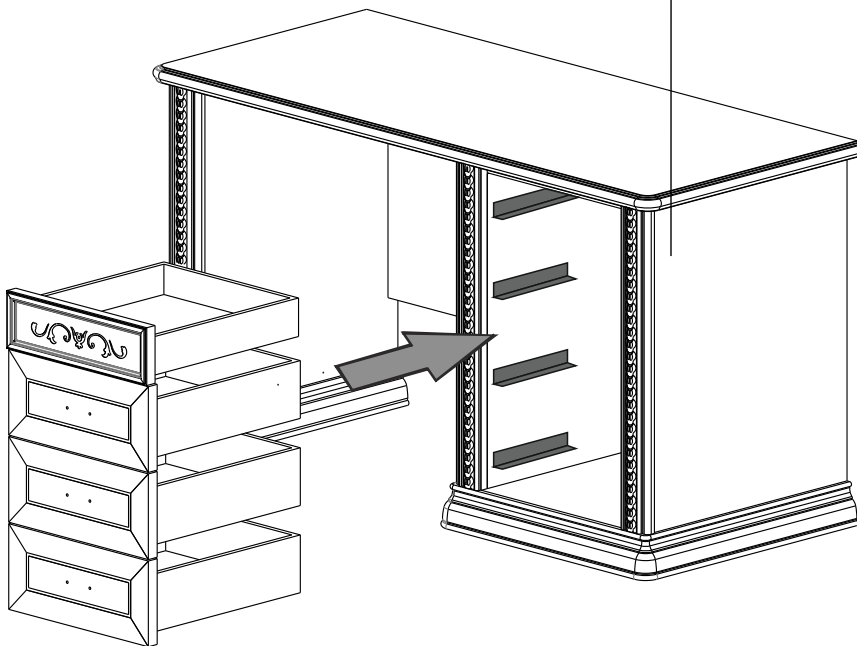   

- Ⓐ push the pin to fix the rail
- Ⓑ Turn it to adjust the drawer

