
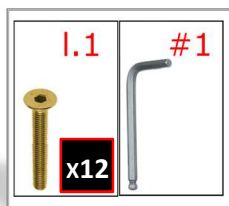


# ADORA

LUXURY-À-PORTER

SCHEMA DI MONTAGGIO VETRINETTA BAR  
ASSEMBLING INSTRUCTION FOR 2/DOORS DISPLAY "LUX"  
INSTRUCTION DE MONTAGE VITRINE 2/PORTES BAR  
ИНСТРУКЦИИ ПО МОНТАЖУ БАРНОЙ ВИТРИНЫ

## Diamante Collection

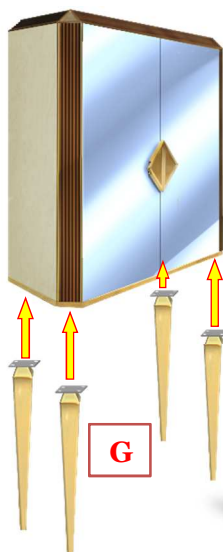

**1**


FISSARE LE GAMBE ( G )

FIX THE LEGS ( G )

FIXER LES JAMBES ( G )

ПРИКРЕПИТЬ НОЖКИ ( G )

**2**

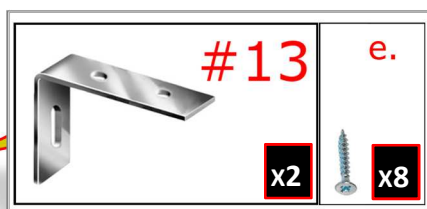


MONTARE SOTTO LA BASE DELL'ELEMENTO LA  
PIASTRA DI FISSAGGIO A MURO (#13).

FIX THE SUPPLIED METAL BRACKETS (#13)  
UNDER THE ELEMENT BASE.

FIXER LA PLAQUES METALLIQUE (#13) SOUS LA  
BASE DE L'ELEMENT.

ПРИКРЕПИТЬ К НИЖНЕЙ ПАНЕЛИ БАЗЫ  
МЕТАЛЛИЧЕСКИЕ (#13) ПЛАСТИНЫ ДЛЯ  
КРЕПЛЕНИЯ К СТЕНЕ.

**3**

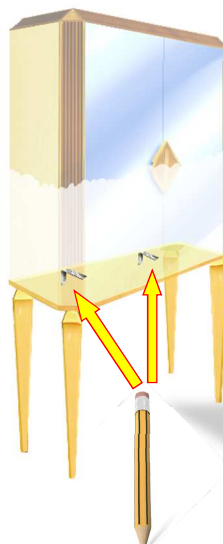

CON L'AUTO DI UNA MATITA, FARE UN SEGNO SUL MURO IN  
CORRISPONDENZA DEI N°2 FORI PRESENTI  
NELLE PIASTRE APPENA MONTATE  
QUINDI FORARE, INSERIRE IL FISCHER E FISSARE IL TUTTO  
CON LE APPOSITE VITI.

USE A PENCIL TO MARK THE WALL IN CORRESPONDENCE OF THE N°2  
HOLES OF THE METAL BRACKET.  
THEN DRILL THE WALL, INSERT "FISCHER" AND FIX  
WITH SUPPLIED SCREWS TO WALL.

UTILISEZ UN CRAYON POUR MARQUER LE MUR EN CORRESPONDANCE DES  
N° 2 TROUS PRÉSENTS DANS LA PLAQUE METALLIQUE.  
PERFORER LE MUR, INSERER LE « FISCHER » ET FIXER  
AVEC VISES FOURNIS AU MUR.

НАМЕТИТЬ КАРАНДАШОМ МЕСТА ДЛЯ 2 ОТВЕРСТИЙ В СТЕНЕ В  
СООТВЕТСТВИИ С ОТВЕРСТИЯМИ НА МЕТАЛЛИЧЕСКИХ  
ПЛАСТИНАХ. ЗАТЕМ ПРОСВЕРЛИТЬ ОТВЕРСТИЯ, ВСТАВИТЬ  
ФИШЕР И ЗАКРЕПИТЬ ВСЕ ВИНТАМИ.