

ADORA

LUXURY-À-PORTER

SCHEMA DI MONTAGGIO LETTO ITALIA / KING
ASSEMBLING INSTRUCTION FOR ITALIAN / KING BED SIZE
INSTRUCTION DE MONTAGE LITERIE ITALIA / KING
ИНСТРУКЦИИ ПО МОНТАЖУ КРОВАТИ ITALIA/KING

Diamante Collection



l.6



X2

l.1



X6

e.1



X32

#1



r.



X6

A



X36


B



X6



X4

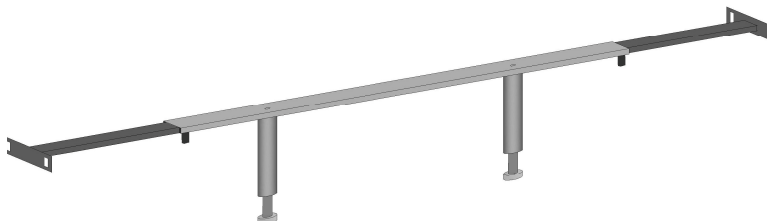


X2

ADORA

LUXURY-À-PORTER

SCHEMA DI MONTAGGIO LETTO ITALIA / KING
ASSEMBLING INSTRUCTION FOR ITALIAN / KING BED SIZE
INSTRUCTION DE MONTAGE LITERIE ITALIA / KING
ИНСТРУКЦИИ ПО МОНТАЖУ КРОВАТИ ITALIA/KING

Diamante Collection

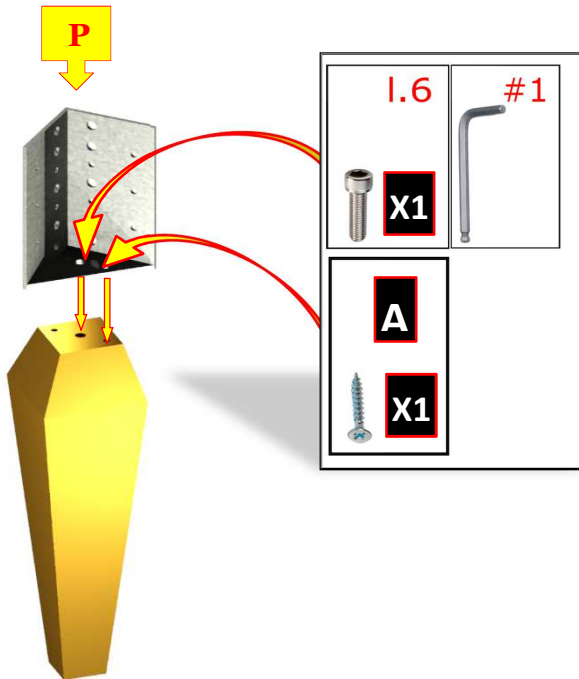

1

FISSARE LA PIASTRA (P) AL PIEDE
CON LE CORRISPETTIVE VITI (e.1 - A)

**FIX THE METAL ANGLE BRACKET (P)
TO THE LEGS WITH SUPPLIED
SCREWS (e.1 - A)**

FIXER LA PLAQUE METALLIQUE (P) AUX
PIEDS AVEC VISES FOURNIS (e.1 - A)

**ПРИКРЕПИТЕ МЕТАЛЛИЧЕСКУЮ
ПЛАСТИНКУ (P) К НОЖКЕ ПРИ
ПОМОЩИ ВИНТОВ (e.1 - A)**


2

MONTARE LE N°4 PIASTRE AI FASCIONI LATERALI.

**SET UP THE N°4 METAL BRACKETS
TO THE SIDE RAILS.**

FIXER LES N°4 PLAQUES METALLIQUES AUX PANS DU LIT.

**ПРИКРЕПИТЕ 4 МЕТАЛЛИЧЕСКИЕ ПЛАСТИНЫ К
ЦАРГАМ.**

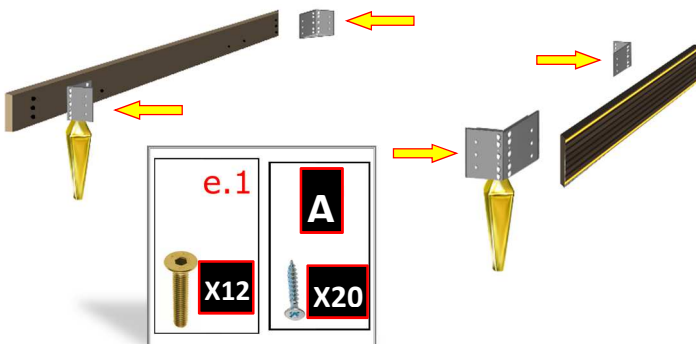


3

FISSARE IL PANNELLO POSTERIORE (Y) E LA
PEDIERA (Z) AI FASCIONI.

**FIX THE BACK FRAME (Y) AND THE
FOOTBOARD (Z) TO THE SIDE RAIL.**

FIXER LE PANNEAU ARRIER (Y) ET LE PIED DU
LIT (Z) AUX PANS DU LIT.

**ПРИКРЕПИТЕ К ЦАРГАМ ЗАДНЮЮ
ПАНЕЛЬ (Y) И ИЗНОЖЬЕ (Z).**

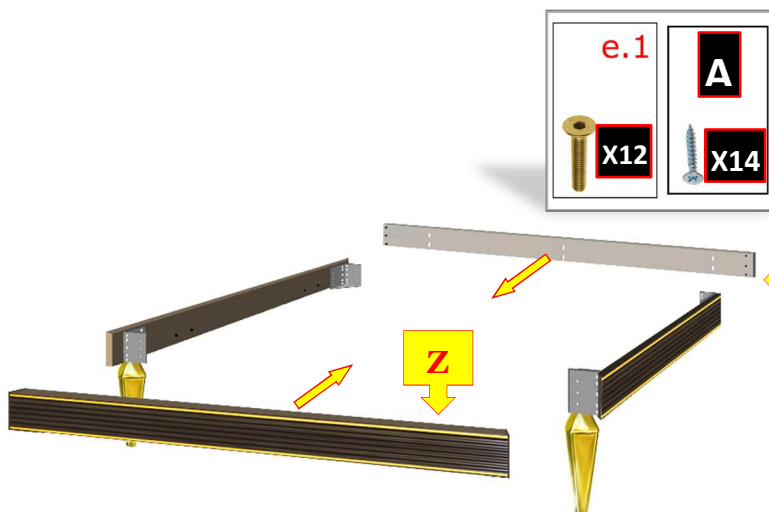

ADORA

LUXURY-À-PORTER

SCHEMA DI MONTAGGIO LETTO ITALIA / KING
ASSEMBLING INSTRUCTION FOR ITALIAN / KING BED SIZE
INSTRUCTION DE MONTAGE LITERIE ITALIA / KING
ИНСТРУКЦИИ ПО МОНТАЖУ КРОВАТИ ITALIA/KING

Diamante Collection




4

AVVICINARE IL GIROLETTO E FISSARLO
AL PANNELLO TESTIERA.

**FIX THE BED FRAME TO THE
HEADBOARD.**

FIXER LE CADRE DE LIT A LA TETE DE LIT.

**ПРИКРЕПИТЬ КАРКАС КРОВАТИ К
ПАНЕЛИ ИЗГОЛОВЬЯ.**

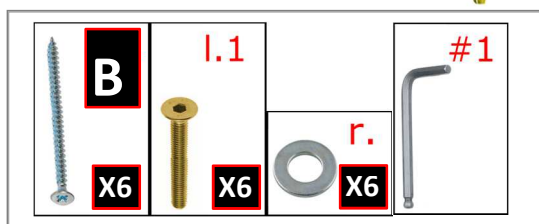

5

INSERIRE LE ASTE DI SOSTEGNO PER LA RETE E
FISSARE NEGLI APPOSITI RIFERIMENTI.
I PIEDI DELLE ASTE DI SOSTEGNO SI POSSONO REGOLARE IN
ALTEZZA PER LIVELLARE L'EVENTUALE IMPERFEZIONE DEL
PAVIMENTO.

**PLACE THE SUPPORT RODS FOR THE SPRING AND FIX
IT TO THE SIDE REILS. ADJUST THE LEVELLING FEET IF
NECESSARY.**

FIXER LA BARRE DE SUPPORT POUR SOMMIER AUX
PANS DU LIT . REGLER LES PIEDS DE MISE A NIVEAU.

**РАСПОЛОЖИТЬ И ЗАКРЕПИТЬ МЕТАЛЛИЧЕСКИЙ
КАРКАС ДЛЯ РЕШЕТКИ. ПРИ НАЛИЧИИ
НЕРОВНОСТЕЙ ПОЛА ОТРЕГУЛИРОВАТЬ НОЖКИ
МЕТАЛЛИЧЕСКОГО КАРКАСА ПО ВЫСОТЕ**

