

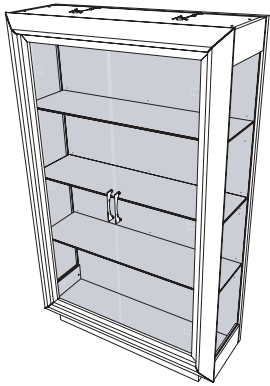
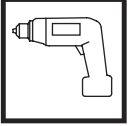
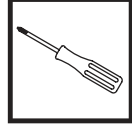
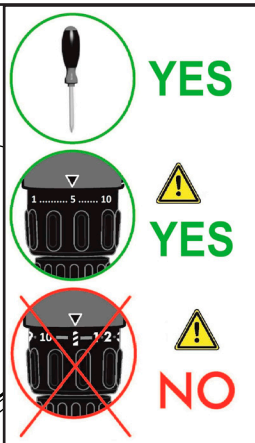
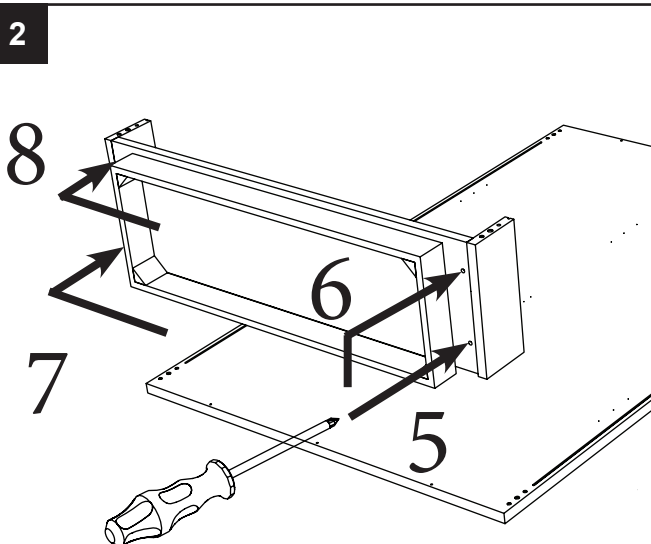
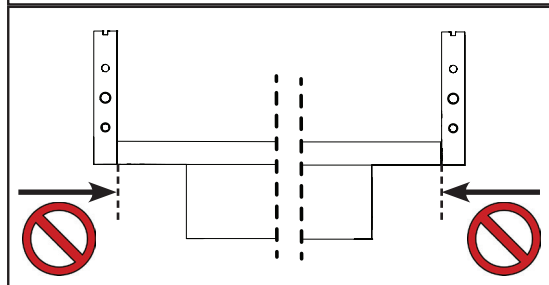


ELITE DAY TWO DOOR VITRINE

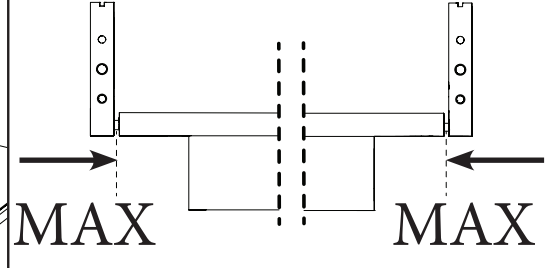


CO155VT2.01PL01
 CO155VT2.01PL02
 CO155VT2.01PL03
 CO155VT2.01VE04
 CO155VT1.01VE05
 CO155VT2.01VE05


m (x1) MPM15501	a (x6) TSP Ø4x60	b (x11) MPARVV013	c (x11) MPARVV014	d (x15) TSP Ø3.5x25	e (x2) MPXFER55	f (x7) TSP Ø3x16
g (x6) MPXFSC01	h (x4) Ø11	i (x6) MPC04CL01	l (x12) TSP Ø3.5x18	n (x4) TBL MA4 x12	o (x4) MPXRON02	
p (x12) TSP Ø4x20 BLAK	q (x4) MPVC14XX0002	r (x2) MPXSLE30	s (x2) MPXSLE53	w (x1) MPKELI02		

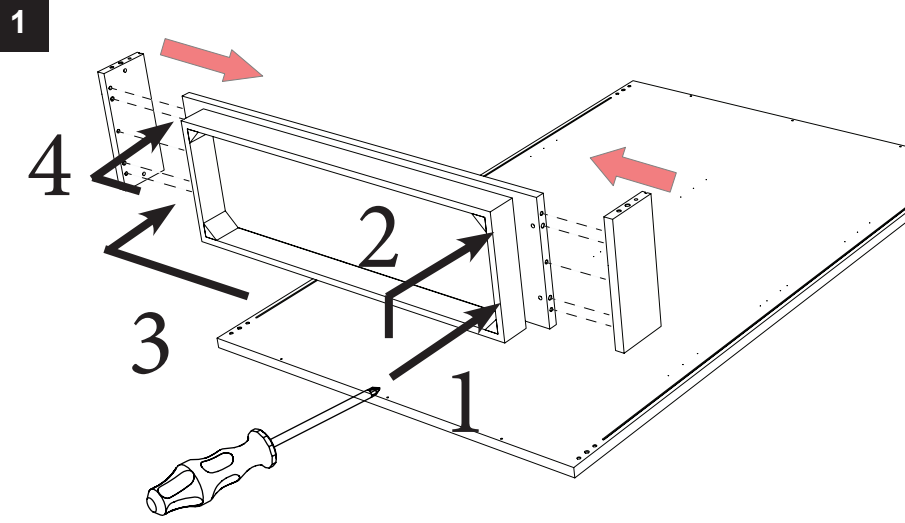

please, do not screw it all in immediately but little by little in sequence!

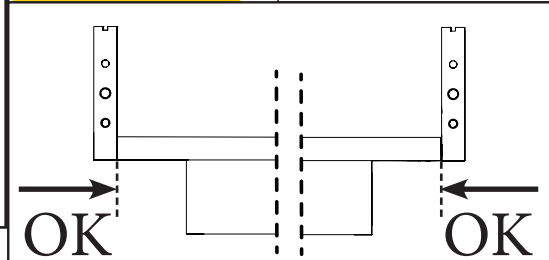

3

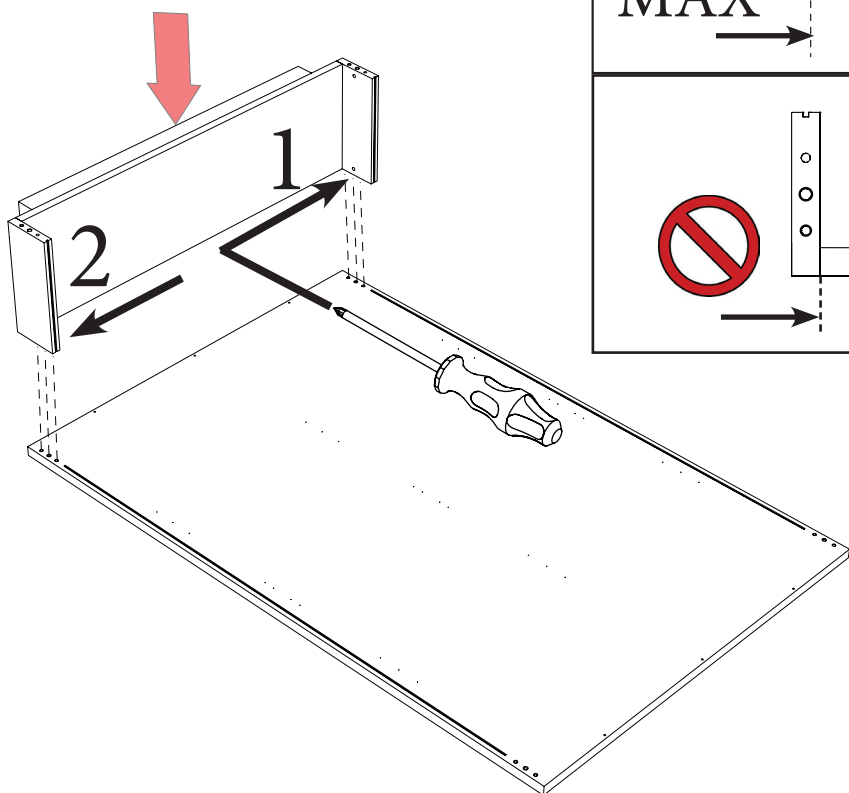


MAX

MAX



please, do not
screw it all in
immediately but
little by little in
sequence!

4

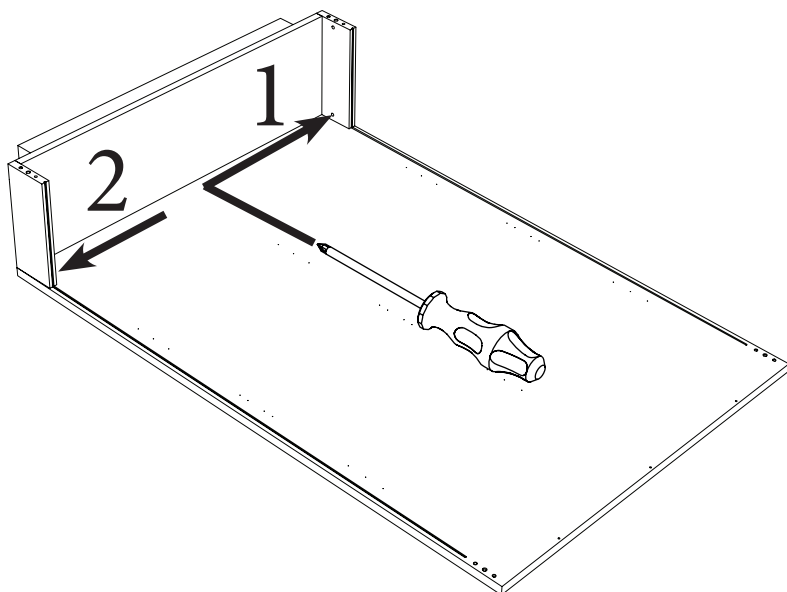

OK


OK




YES

YES



NO

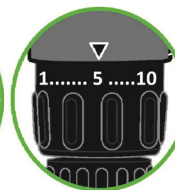




5

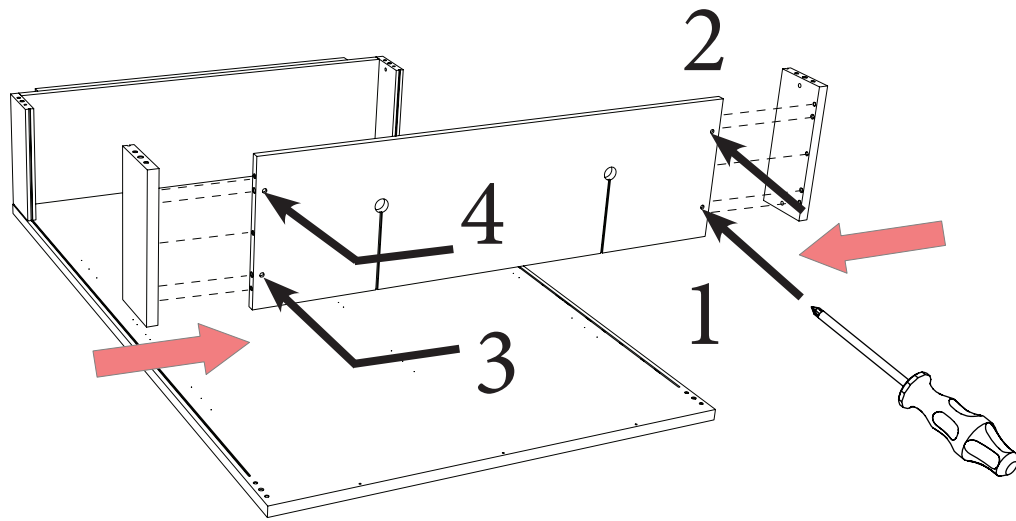



please, do not screw it all in immediately but little by little in sequence!

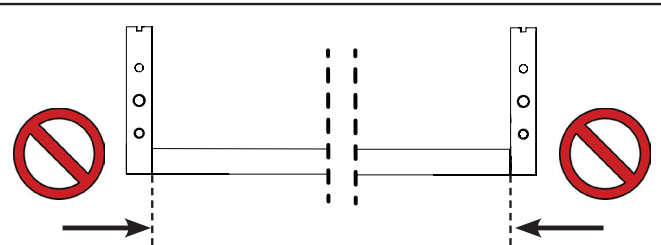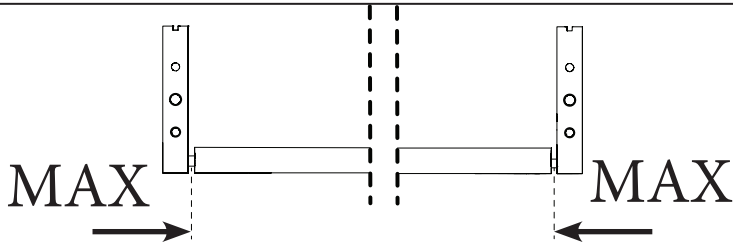



6

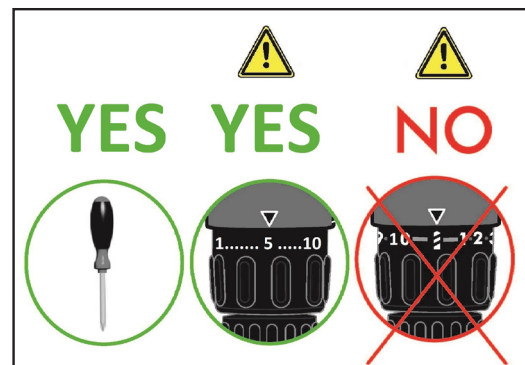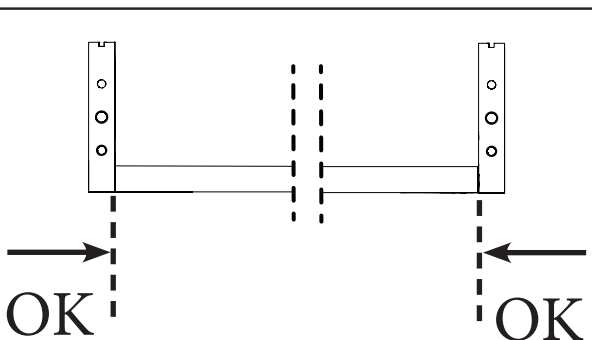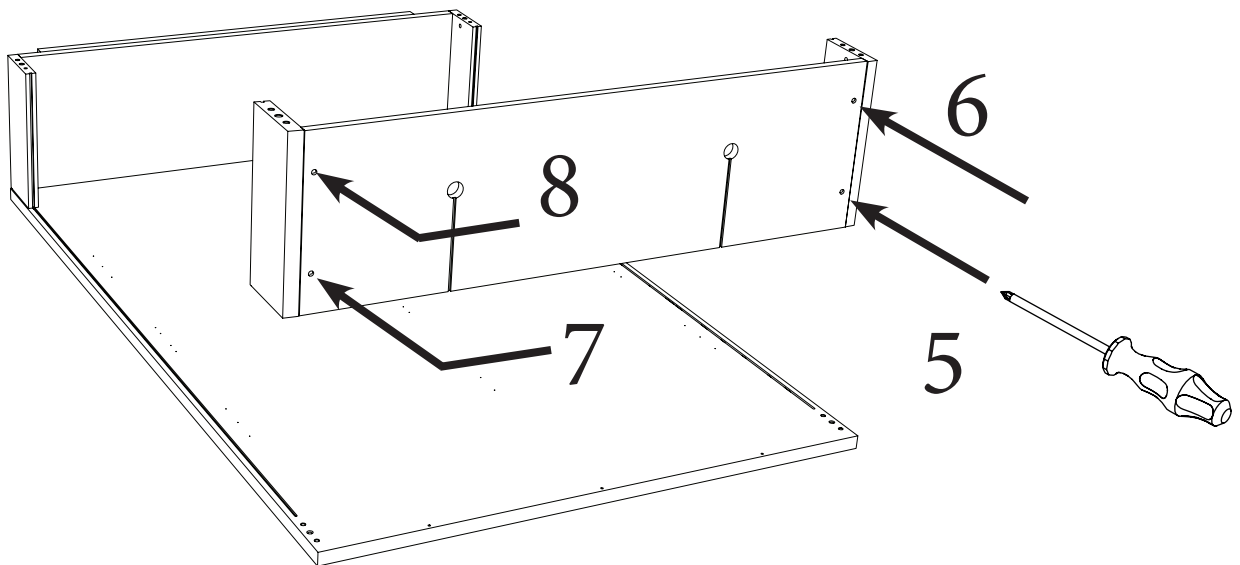



7

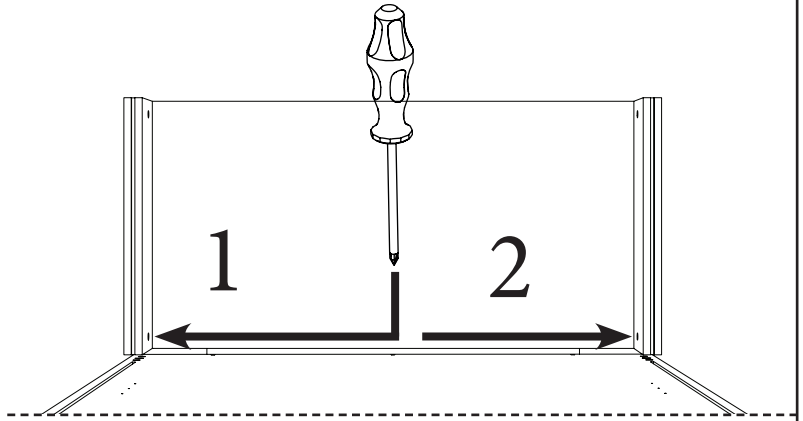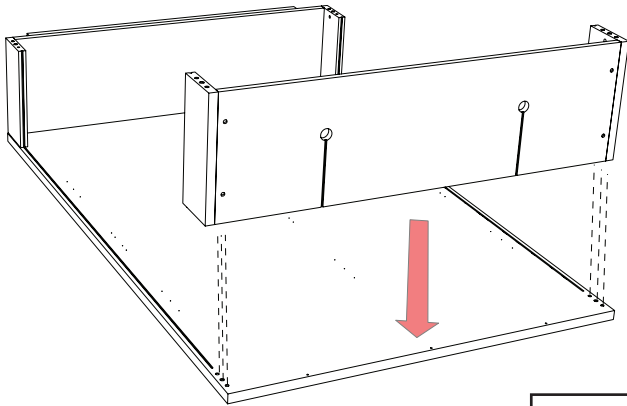



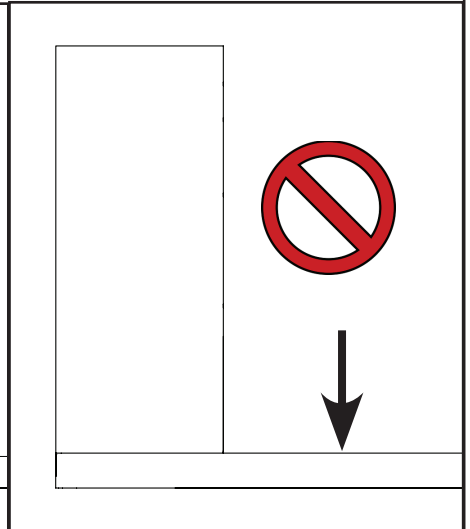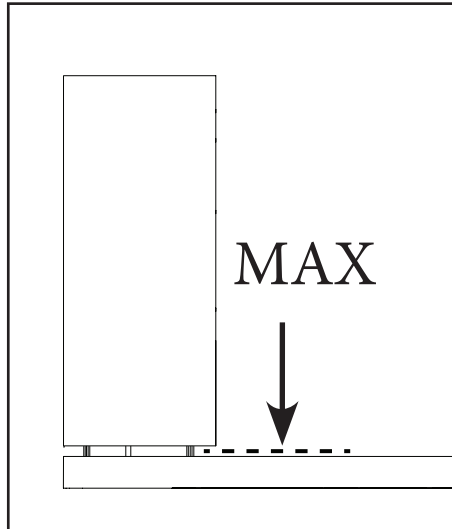


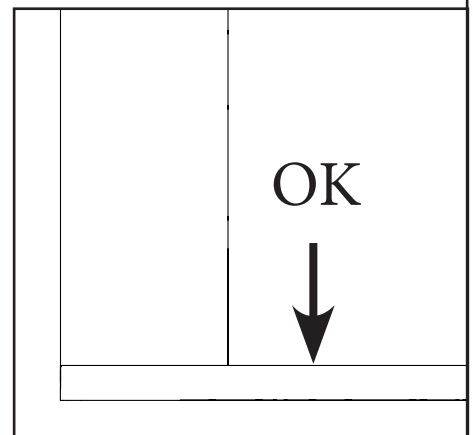
please, do not
screw it all in
immediately but
little by little in
sequence!

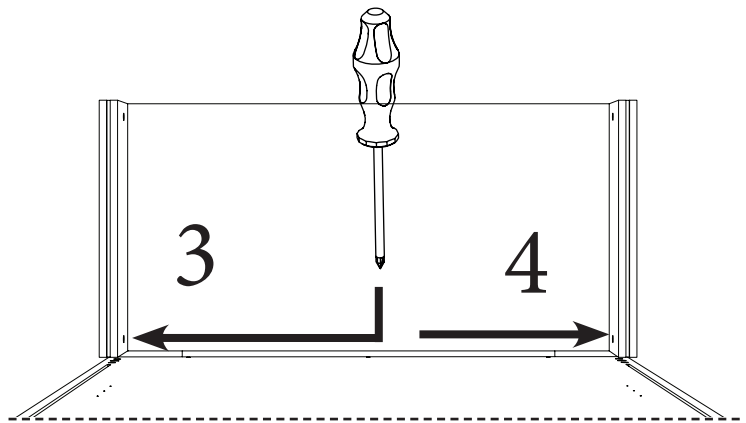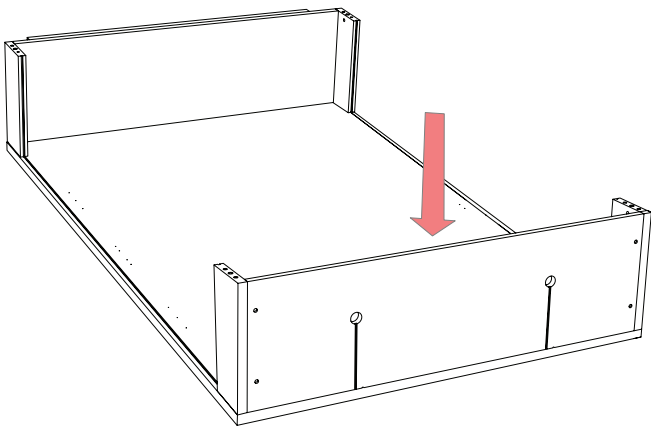


8








YES YES NO



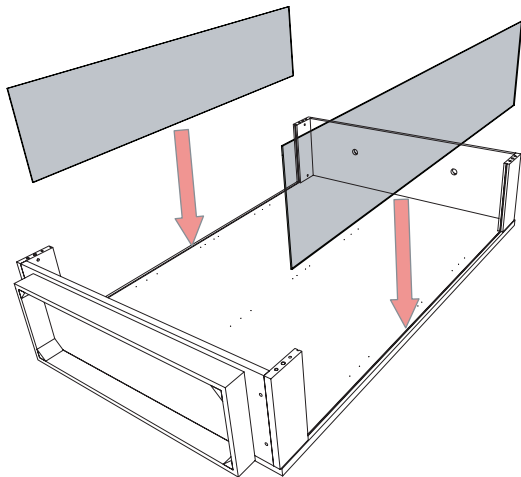


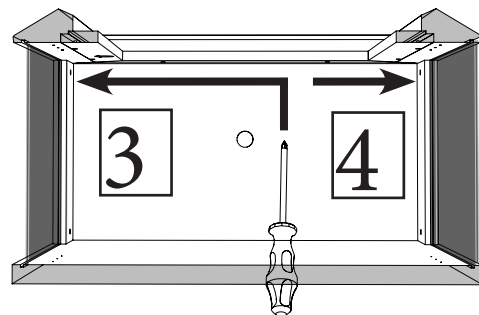
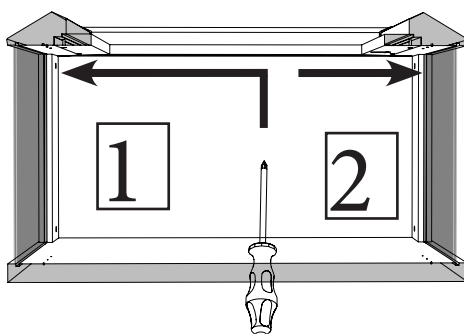
9

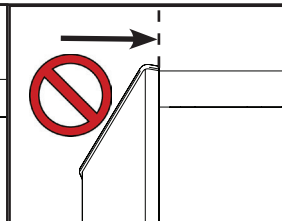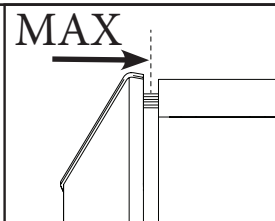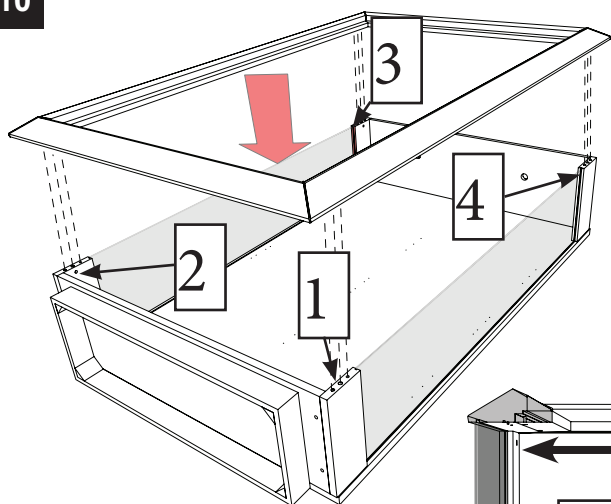






10




please, do not screw it all in immediately but little by little in sequence!




11

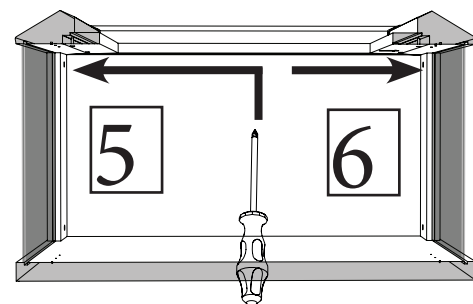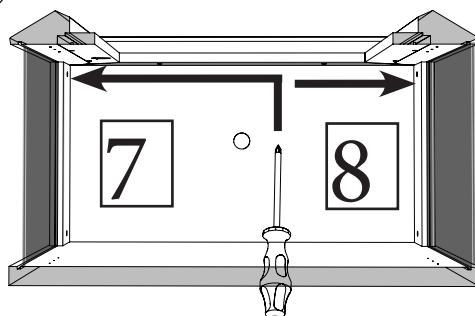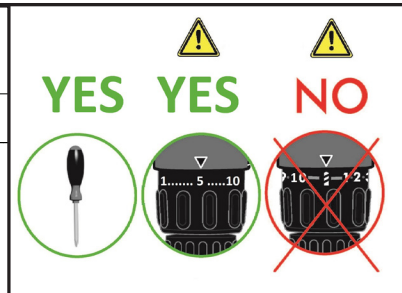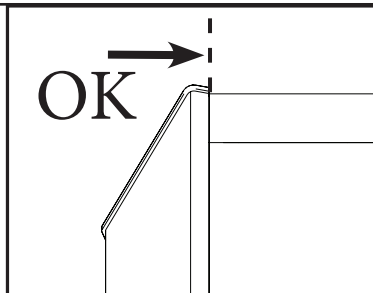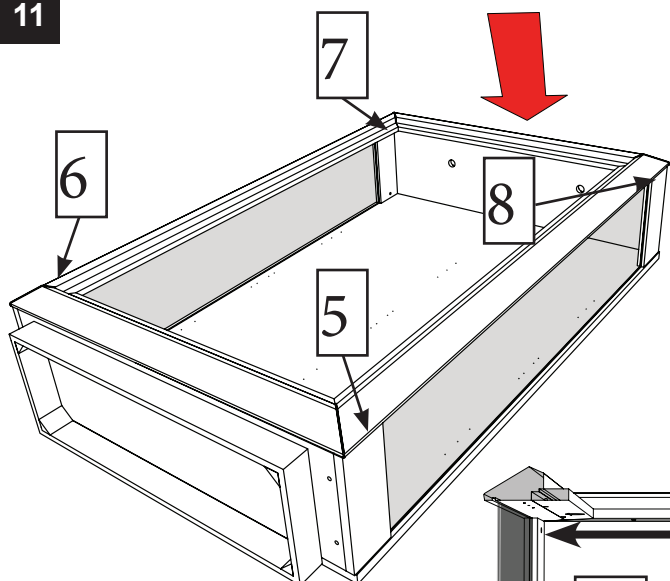


12

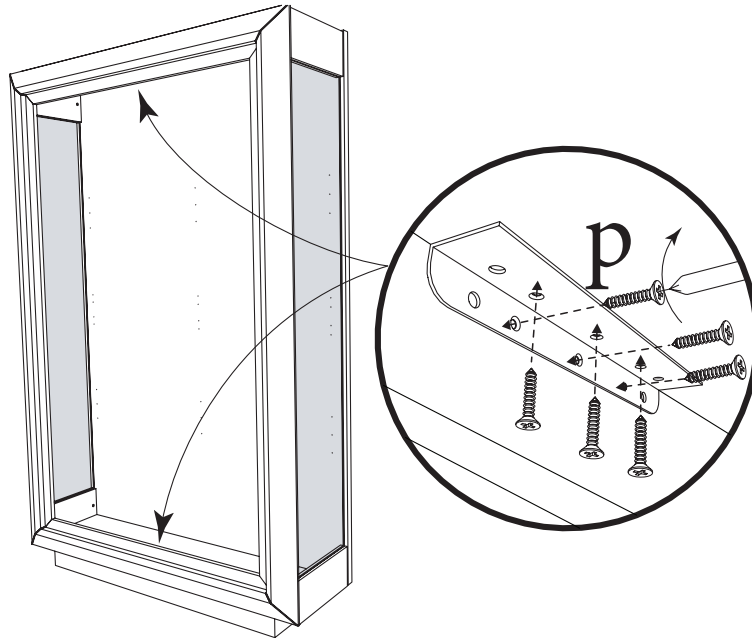


13

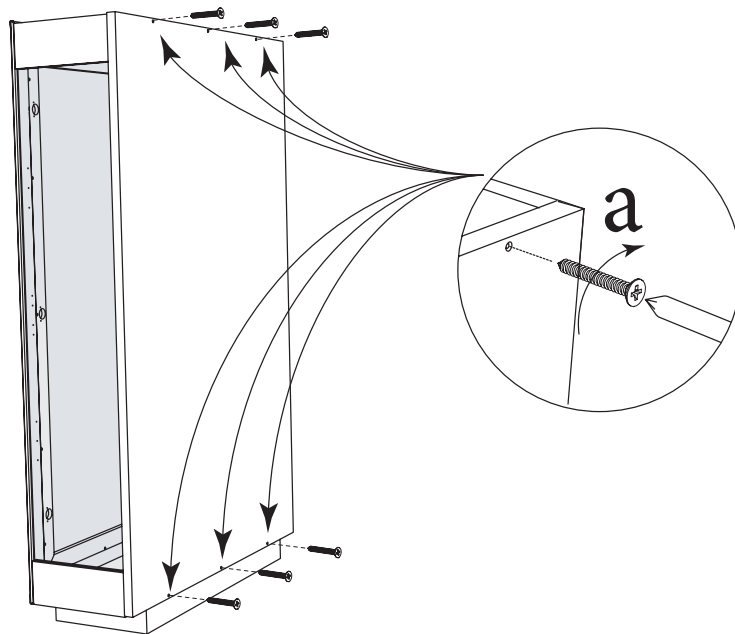


14

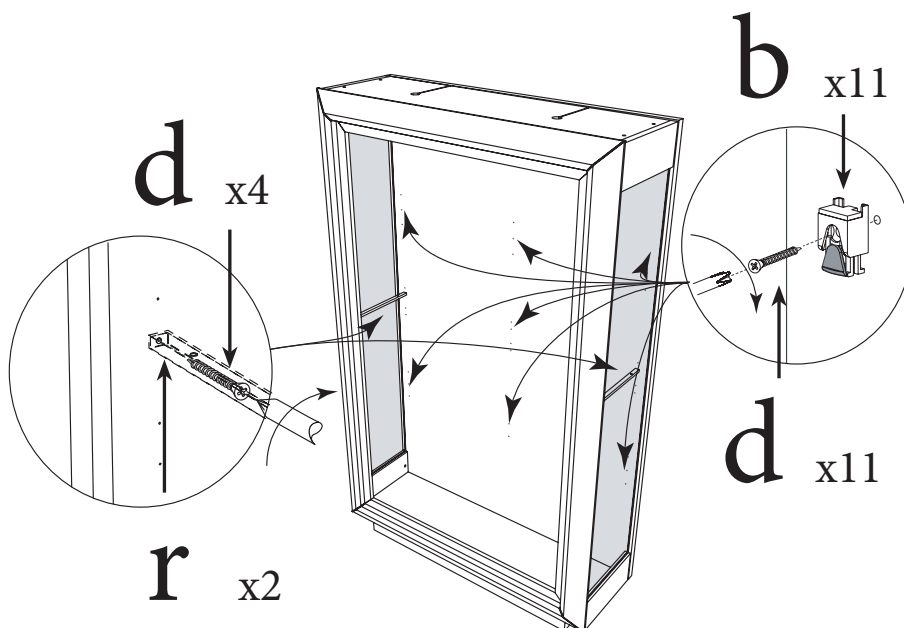


15

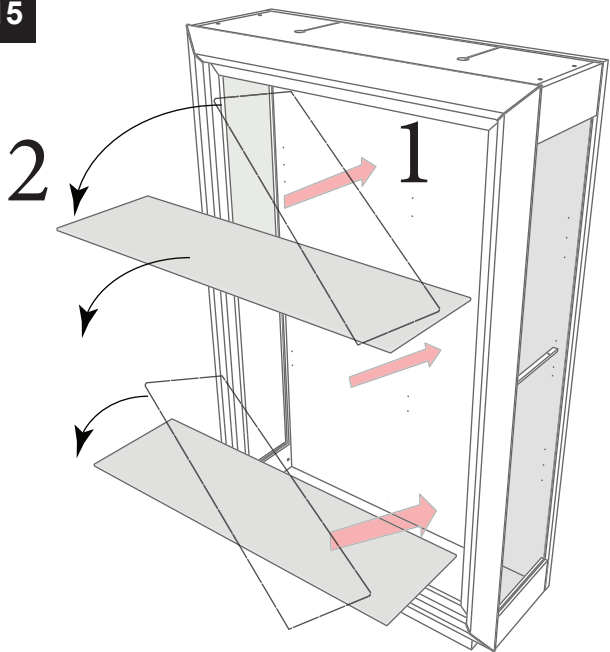


16

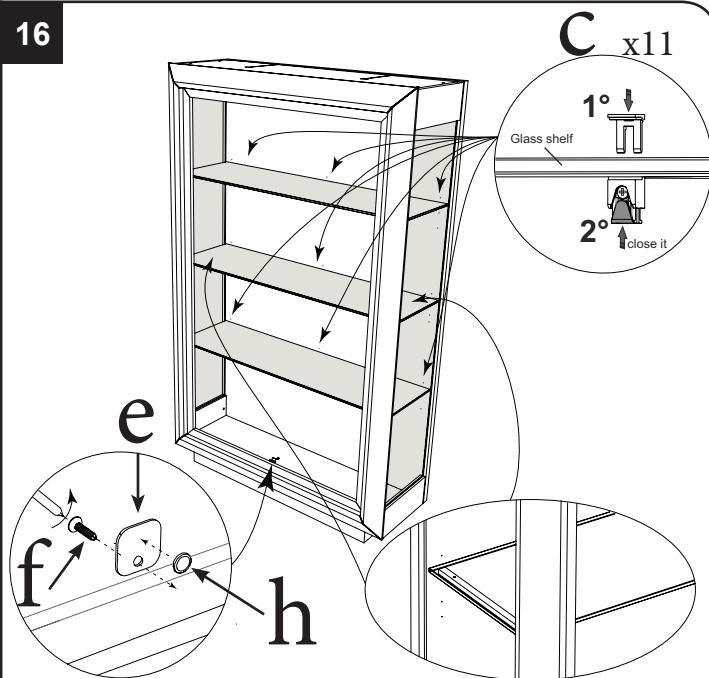


17





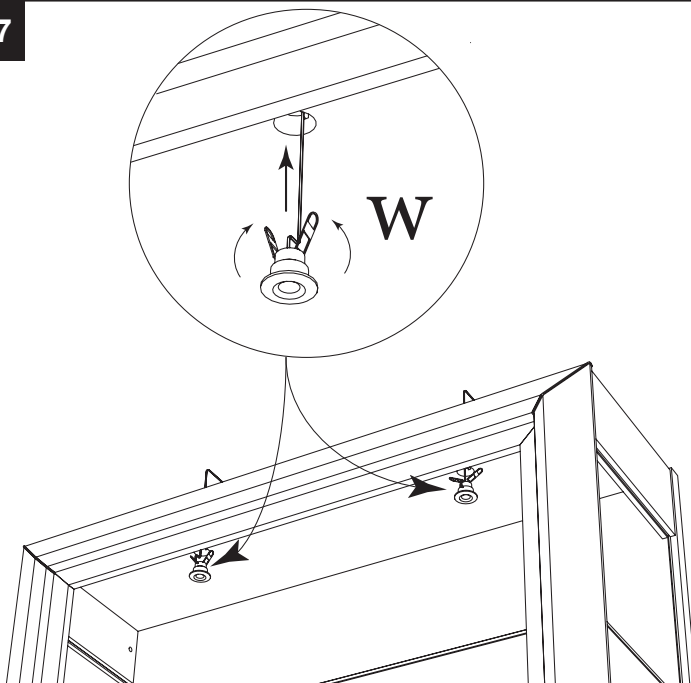


18


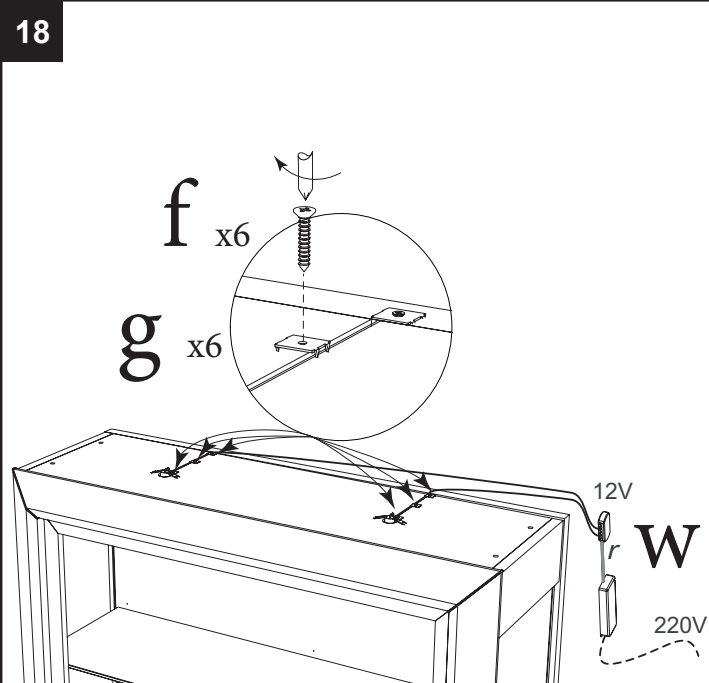


19

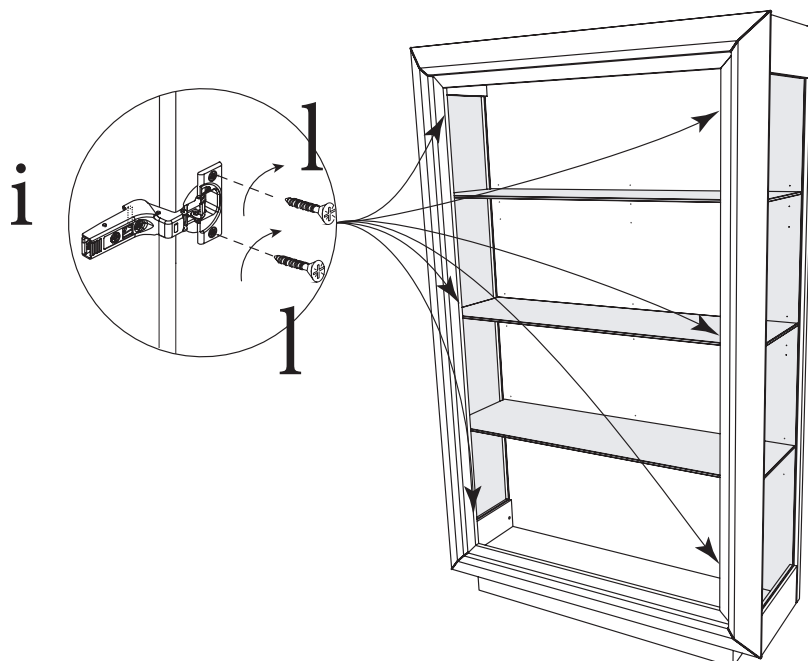

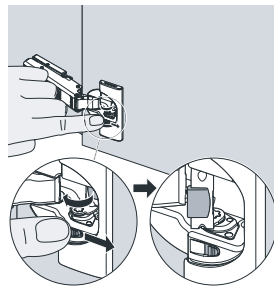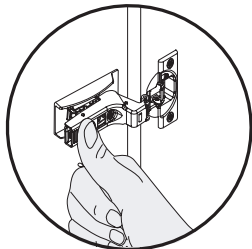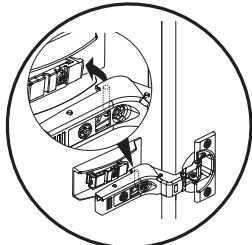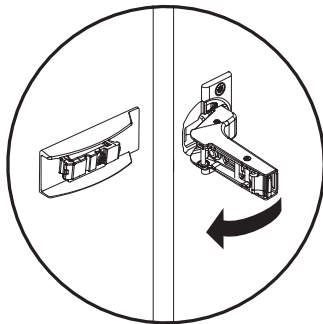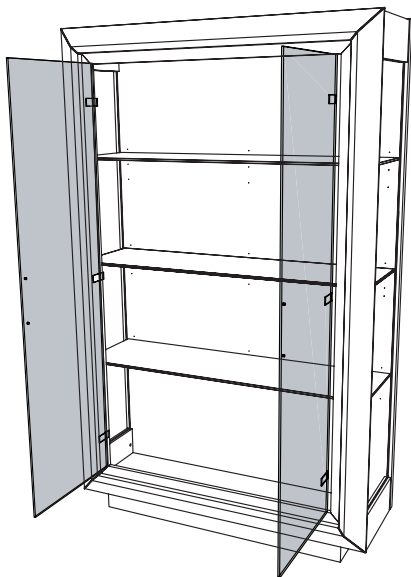

Activation

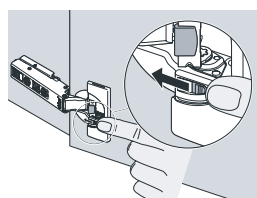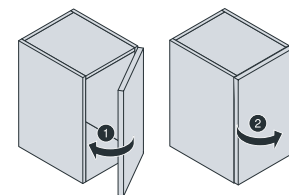

Deactivation of BLUMOTION
for small / light fronts

