
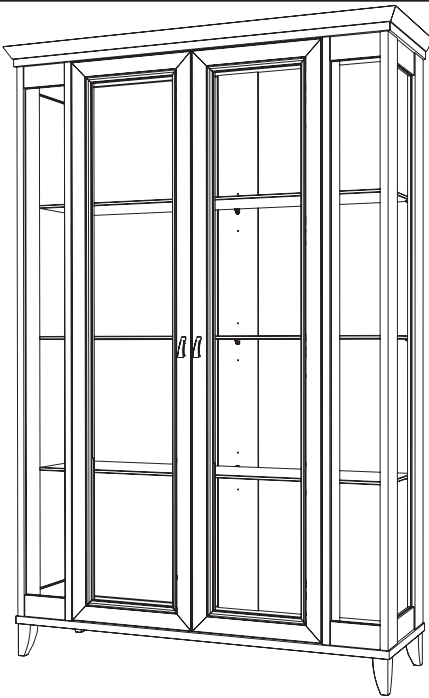
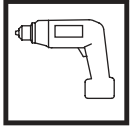



GIOTTO

CRISTALLIERA 2 AV CURIO CABINET

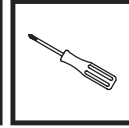


| | | | |
|---------------------------------|-----------------------------|---|-----------------------------|
| a (x4) SF157CMN.006BA | b (x4) TBL 6MAX40 | c (x15) MPARVV012 | d (x2) |
| e (x2) | g (x2) MPM16101 | i (x1-2) MPXPZO98 | j (x6) col. 17 |
| k (x6) H. 4 | o (x24) MPXVAR37 | p (x1) MPXFER52 | q (x2) TSP 3.5X16 |
| t (x4) MPXFER04 | u (x43) TSP 4 X18 | w (x1) camelgroup MPDXXX18 | y (x5) MPXVAR19 |
| z (x1) | | | |


1

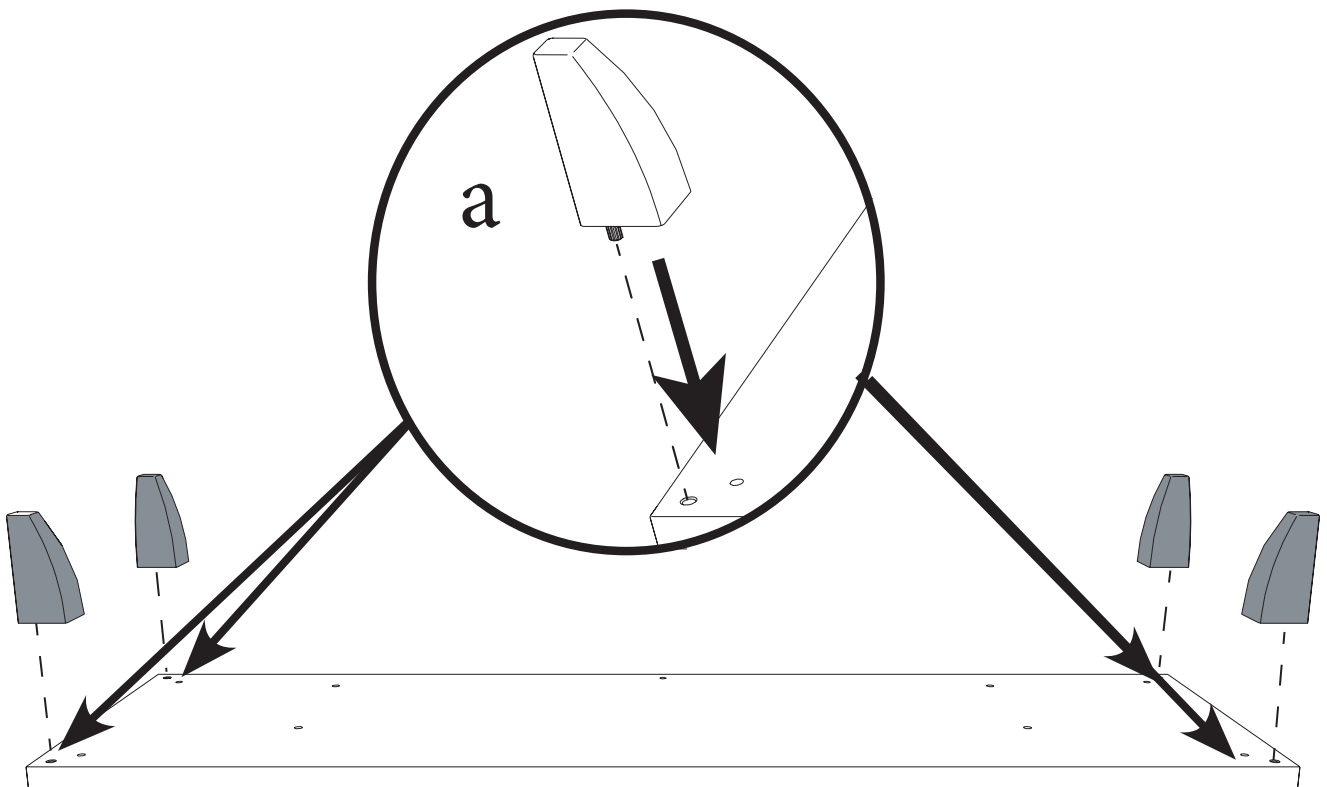

2

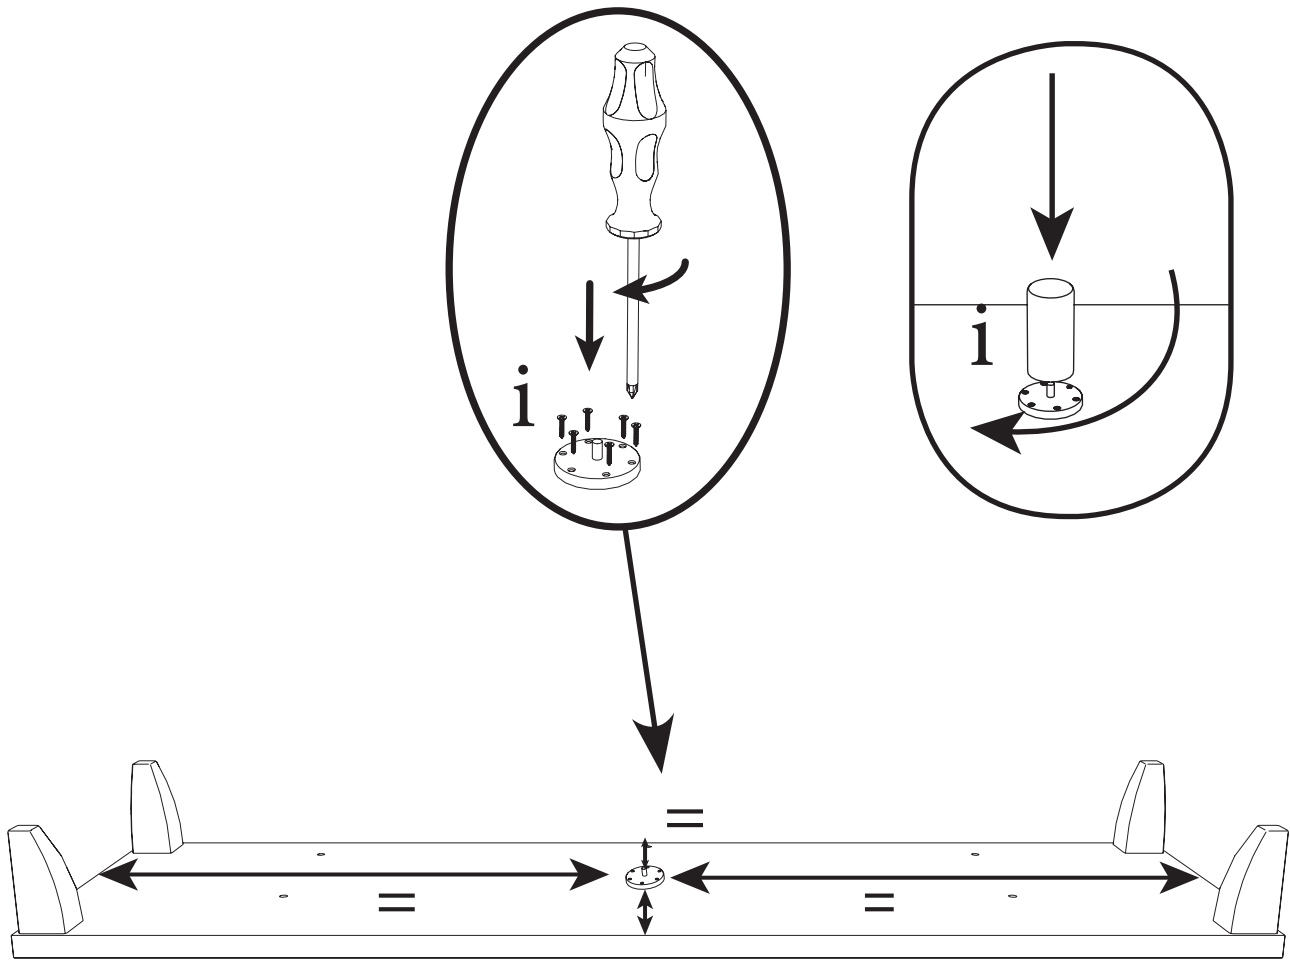






3

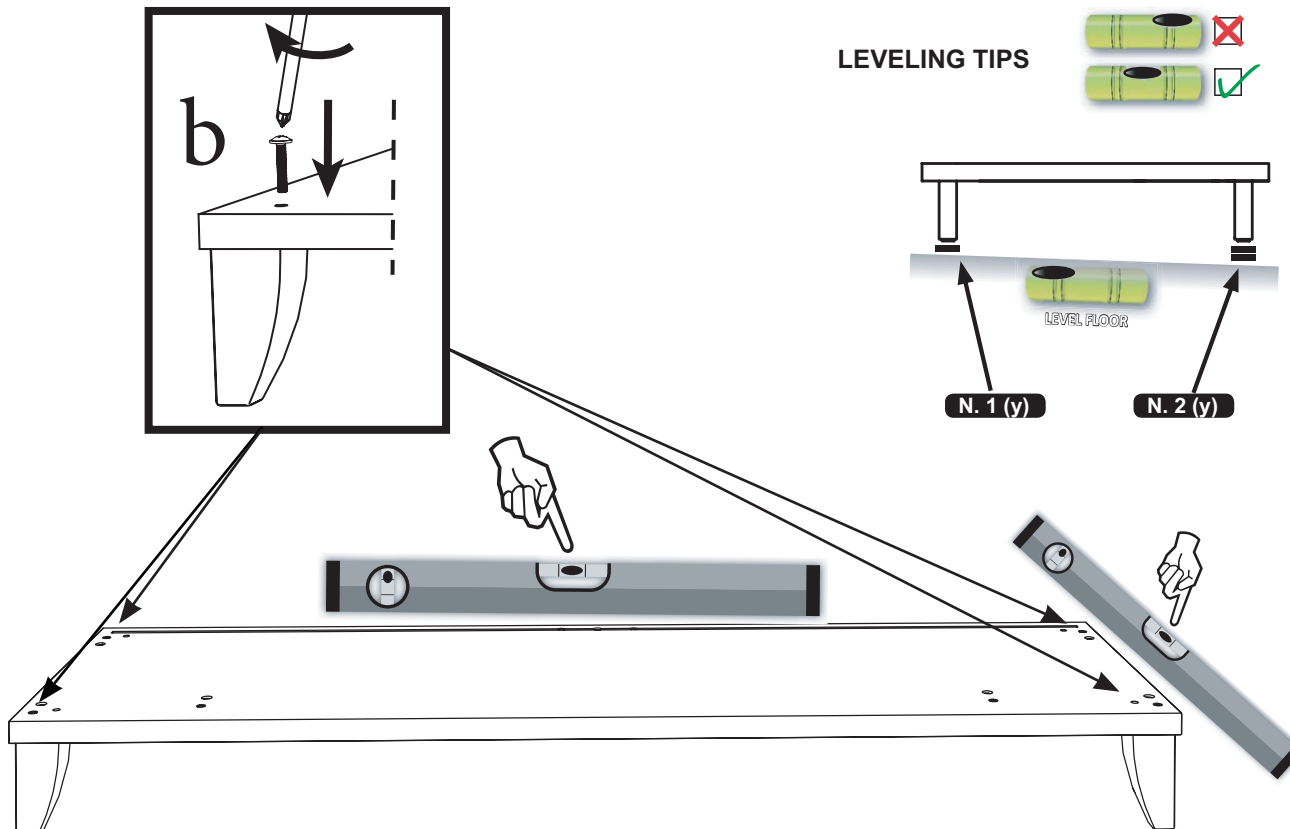



4




please, do not screw it all in immediately but little by little in sequence!

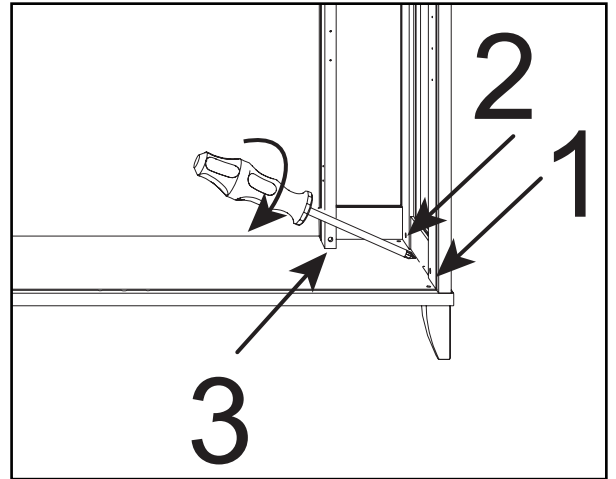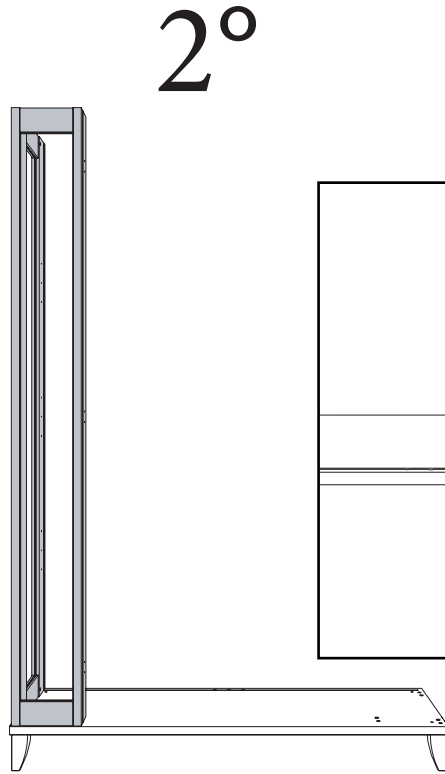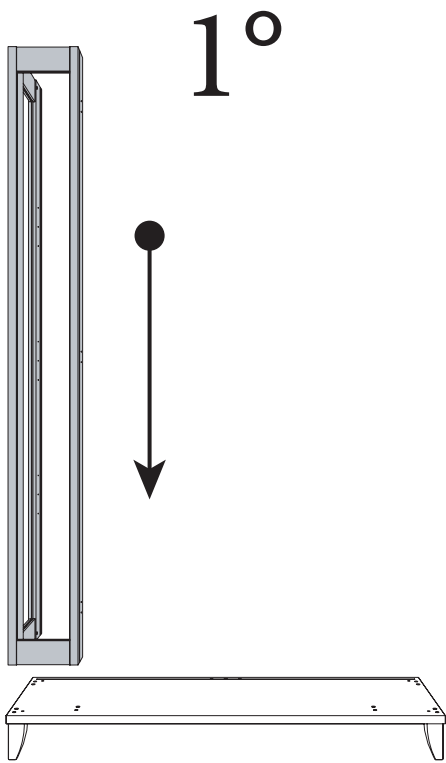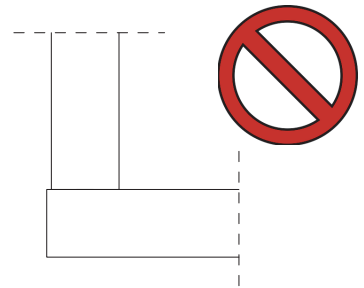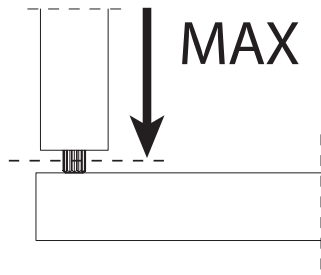

5

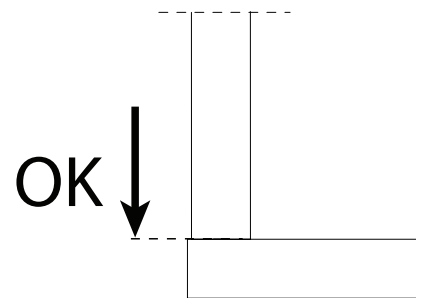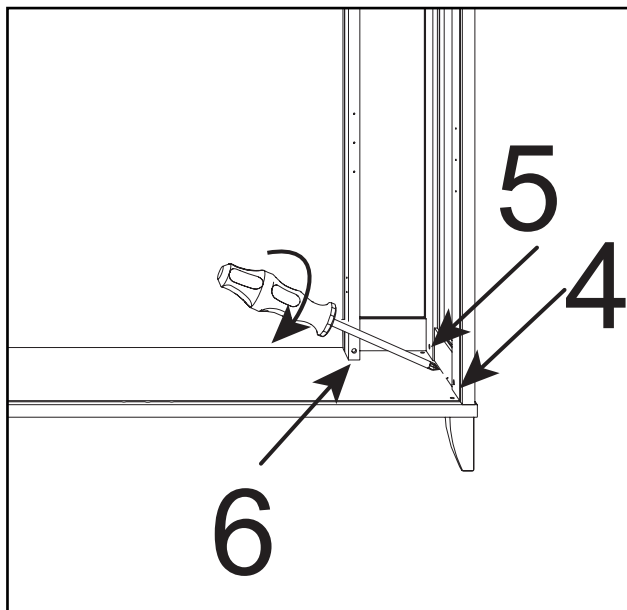

YES

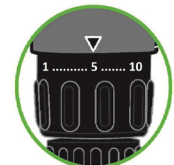

YES








NO





6



please, do not screw it all in immediately but little by little in sequence!

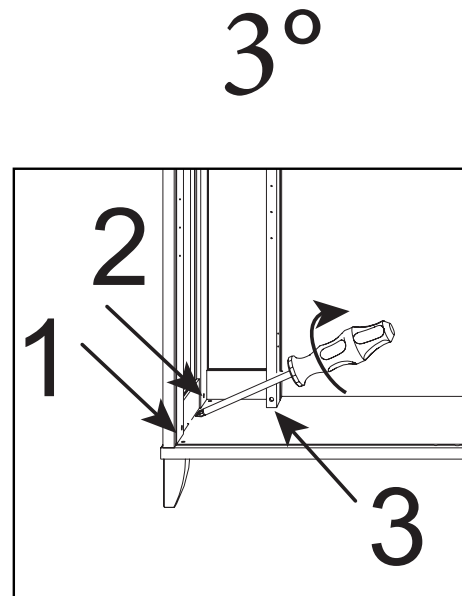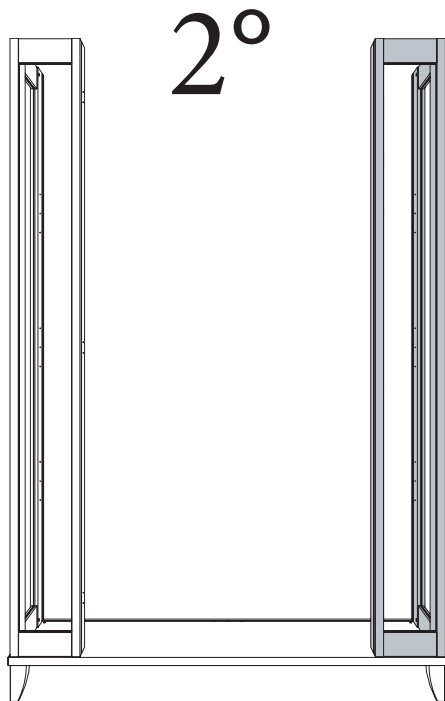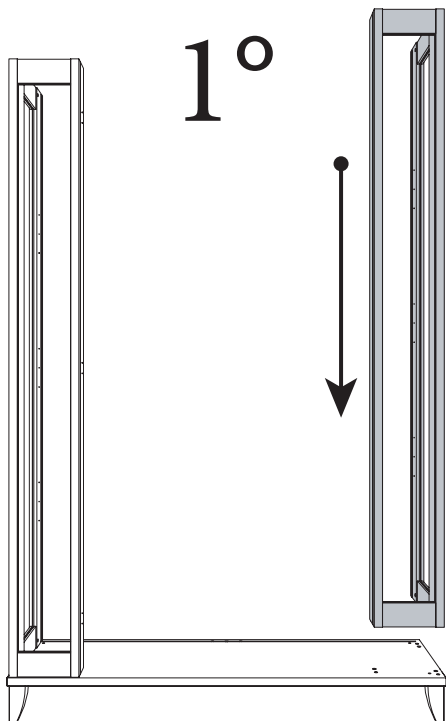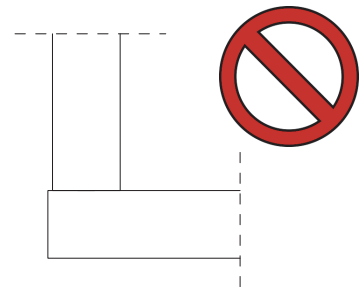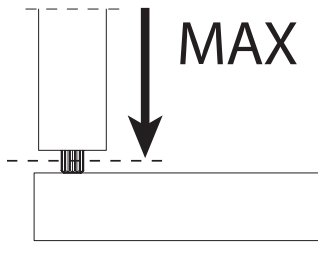


7

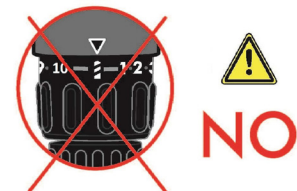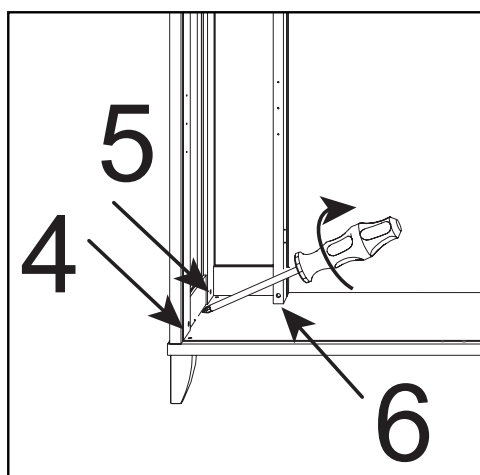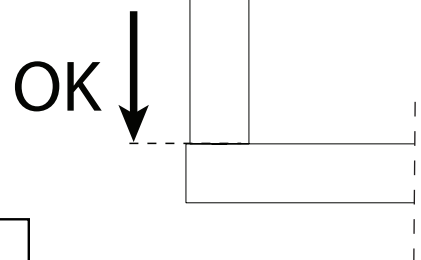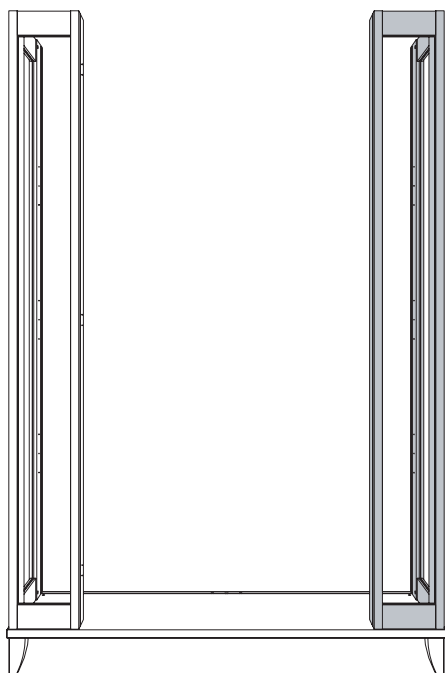


1°

2°

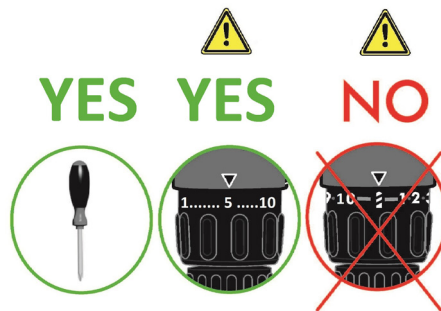


3°

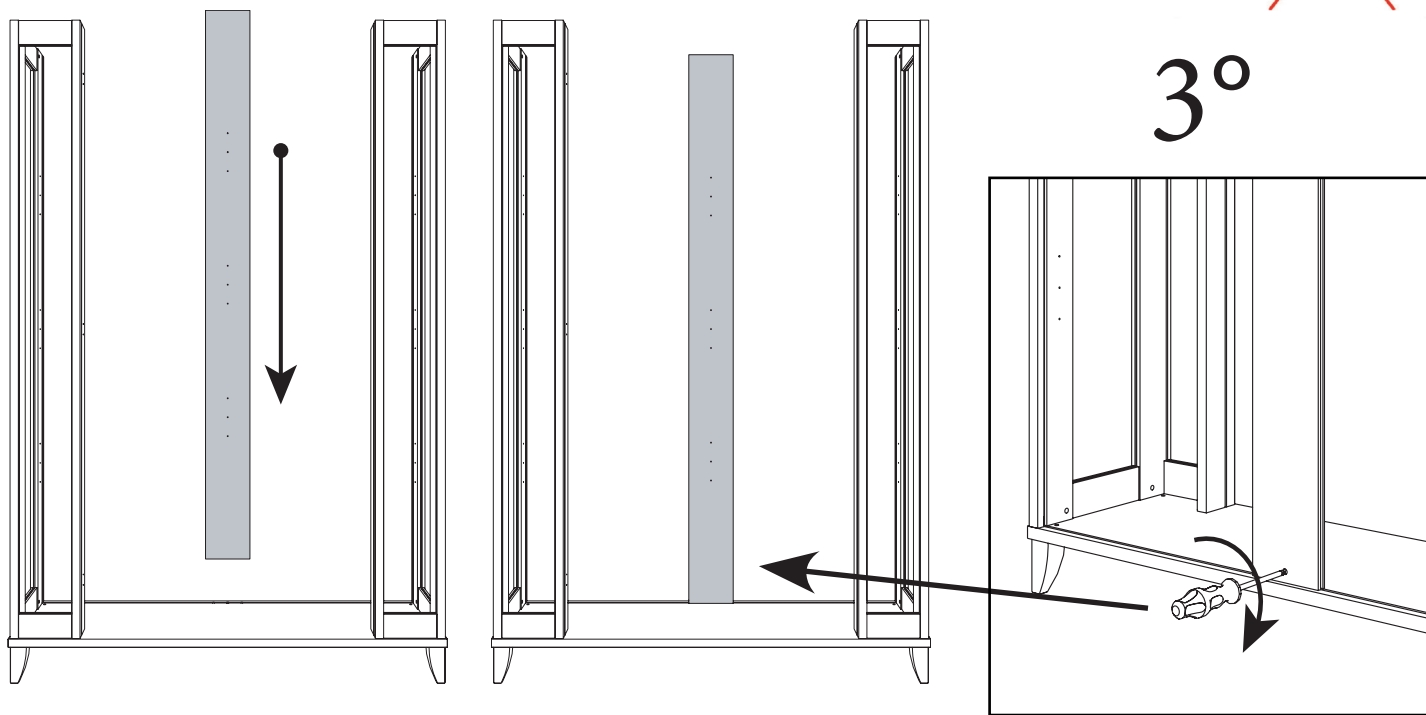


1°


2°

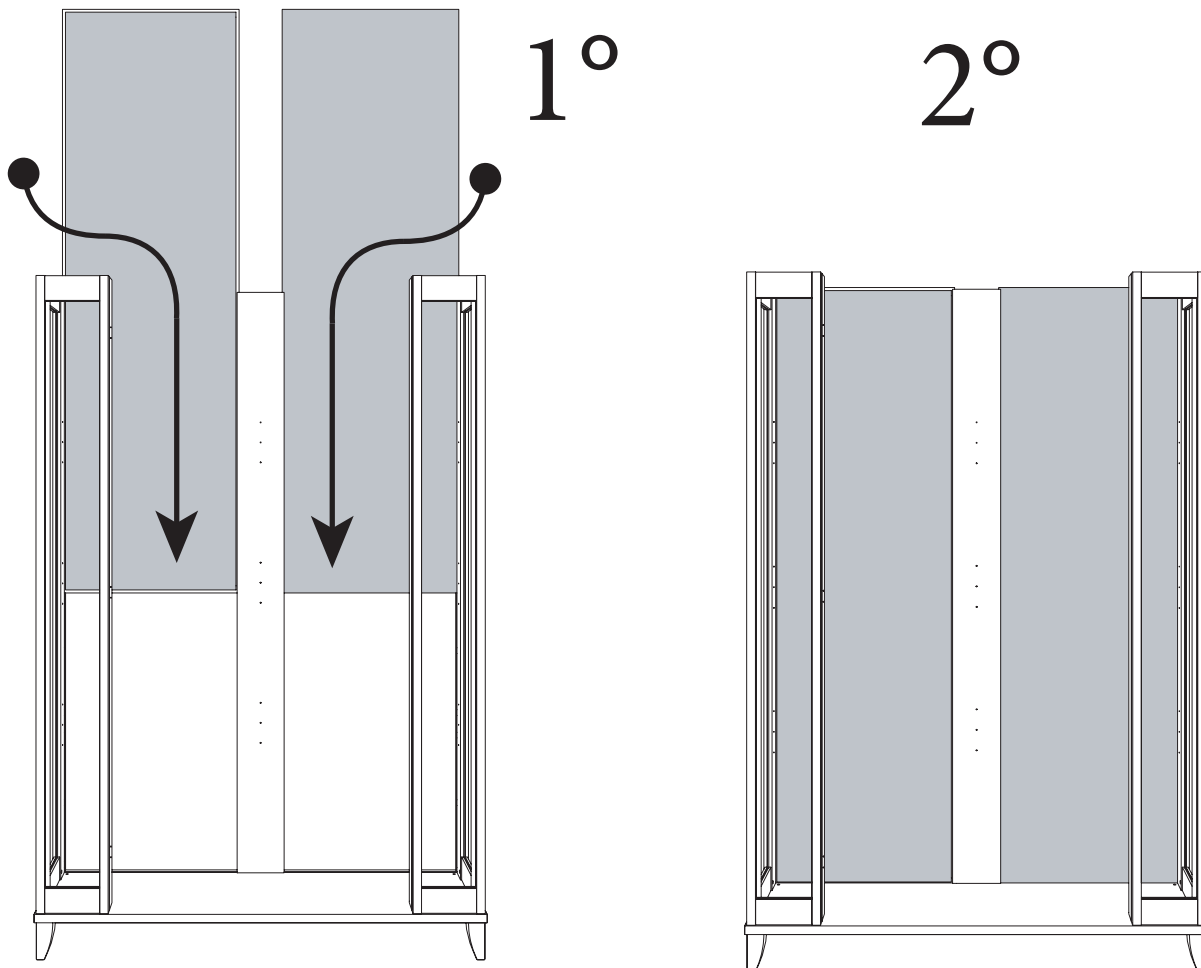





10

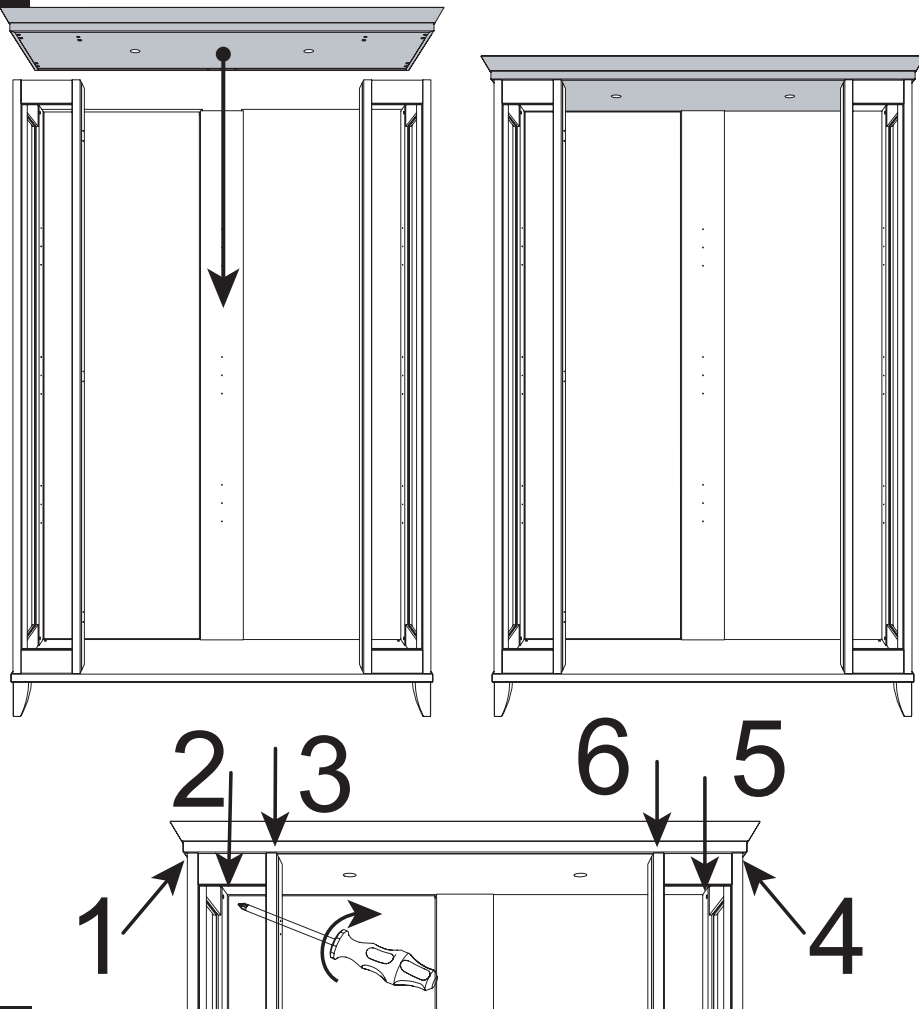

please, do not screw it all in immediately but little by little in sequence!

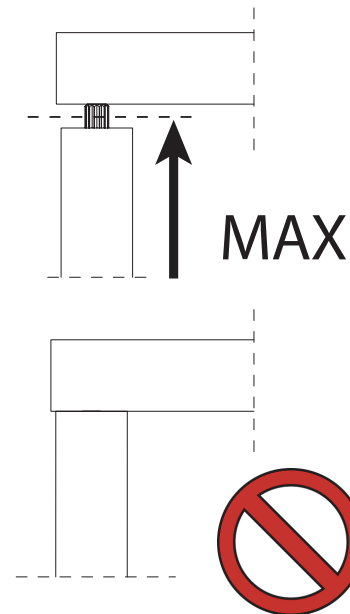

11

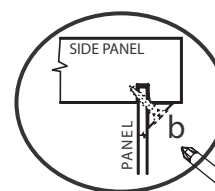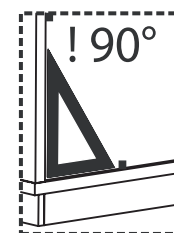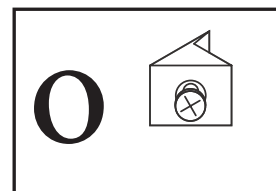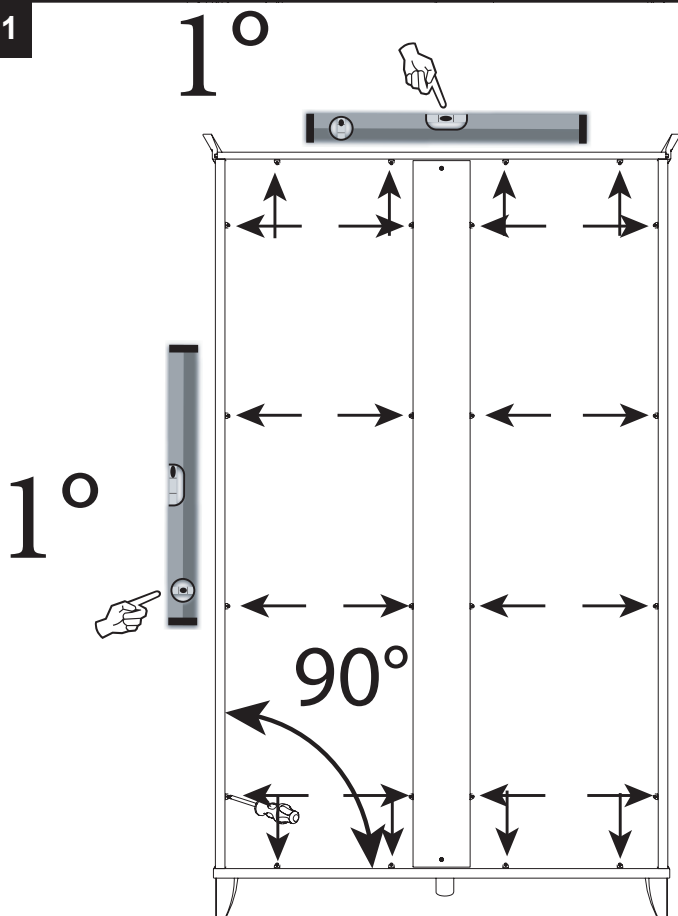

1°



1°

2°

3°



12

OPTIONAL DRAWER

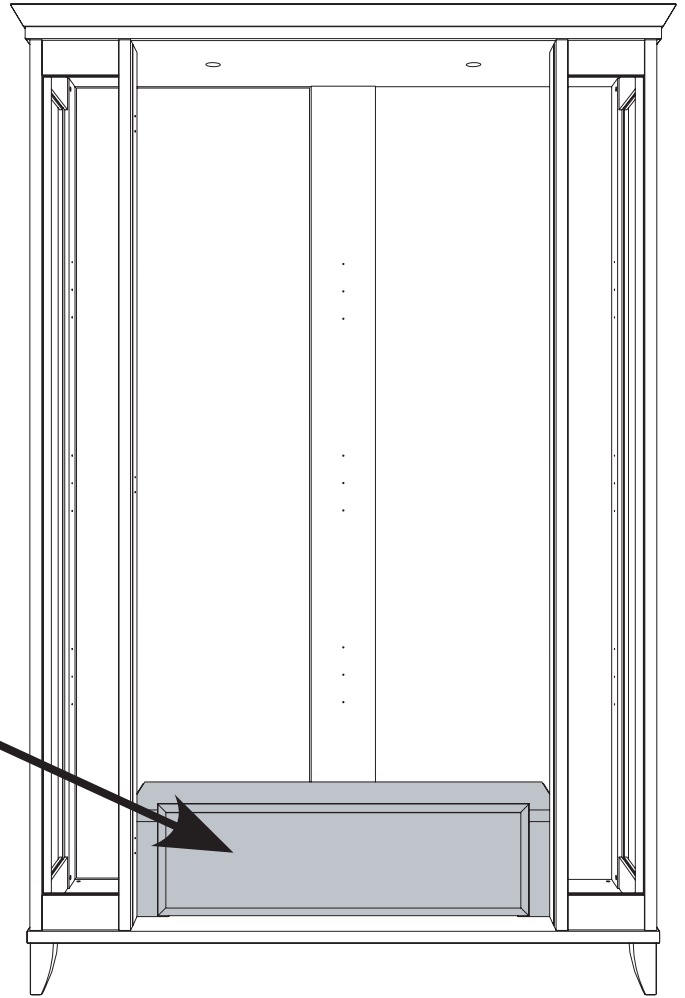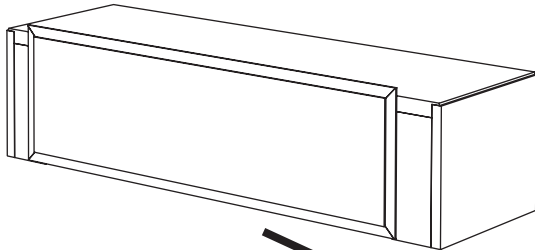


13

1°-2°-3°

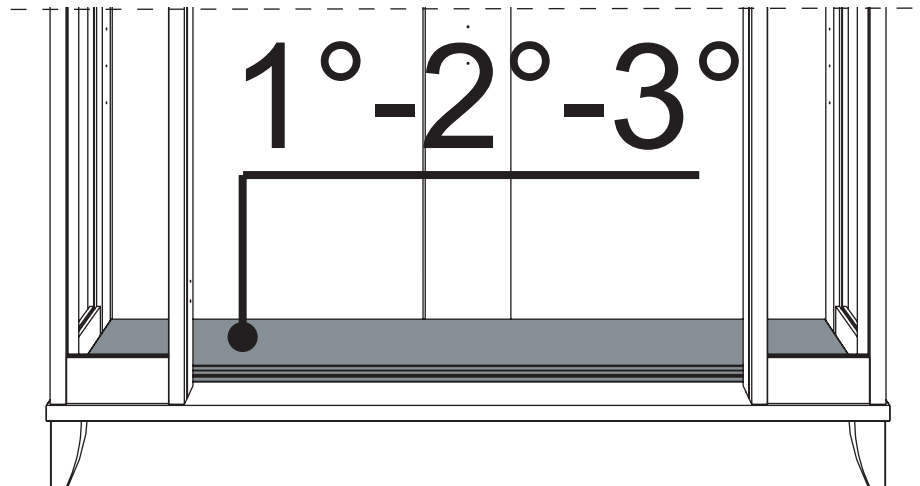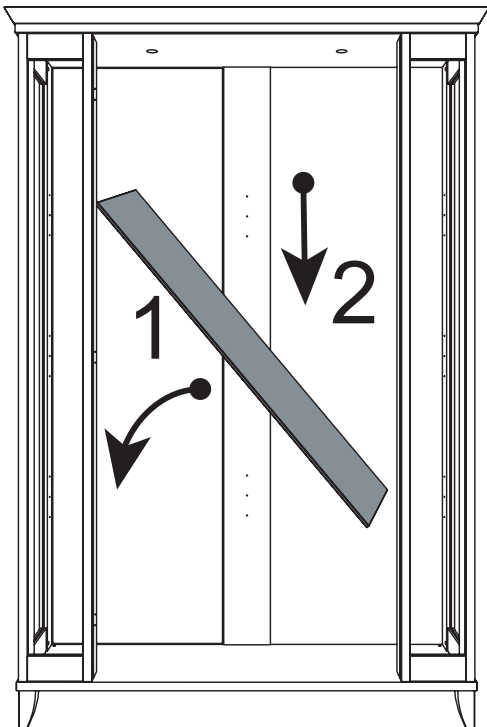


14

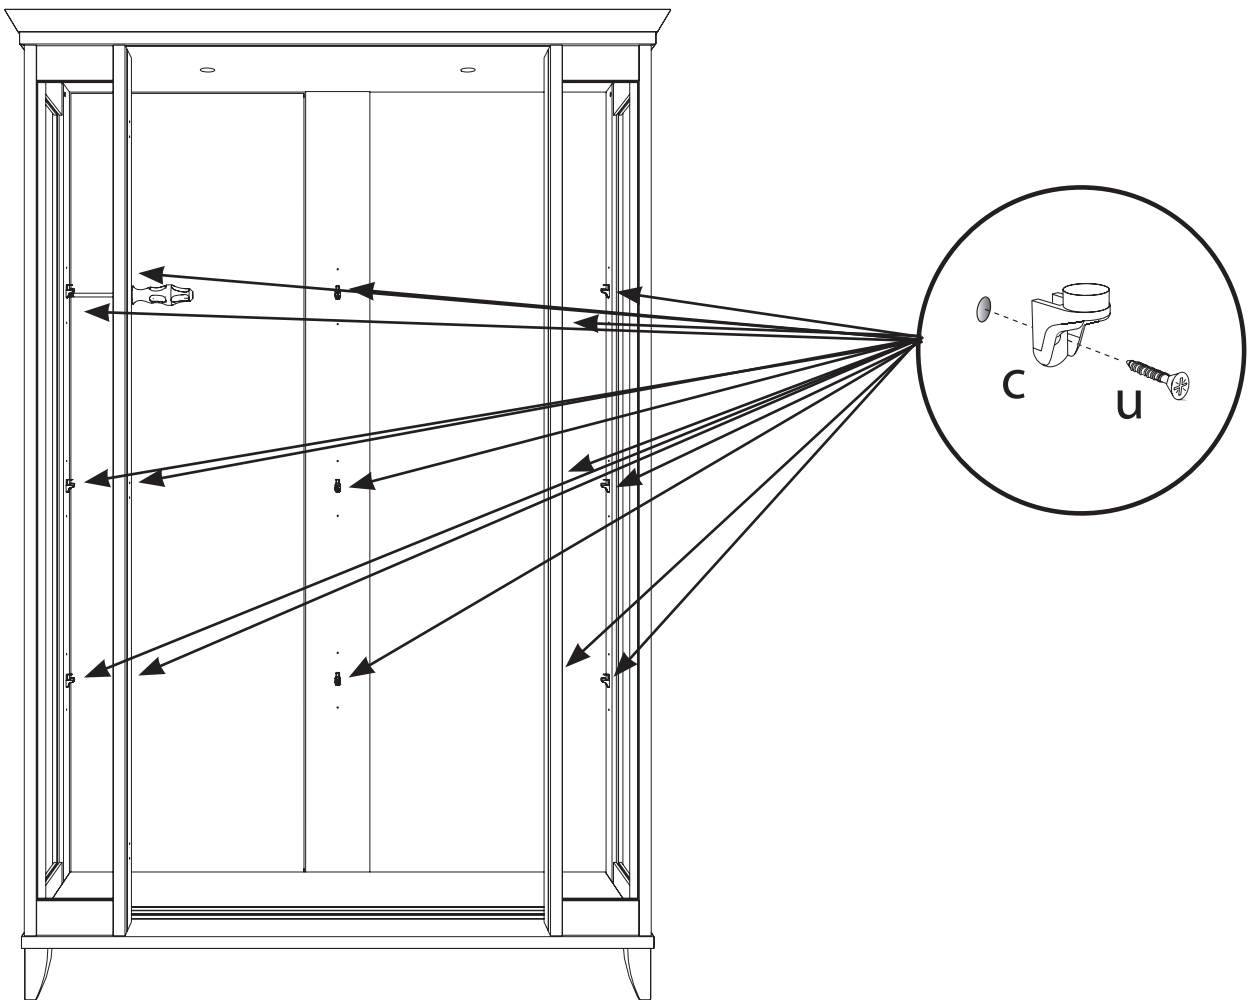


15


1°

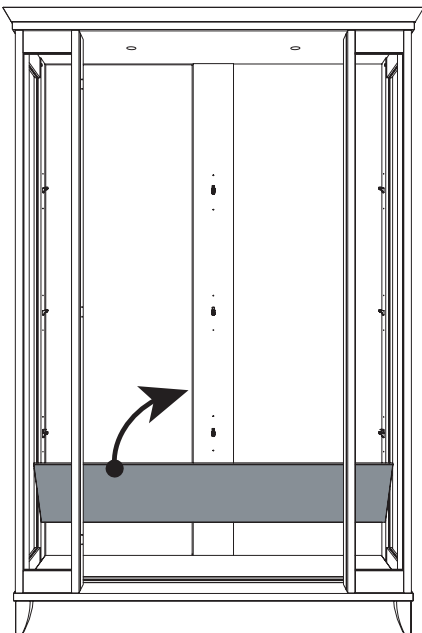


2°

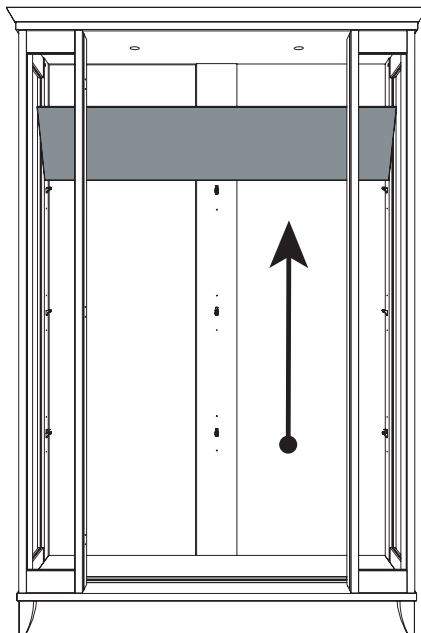


3°

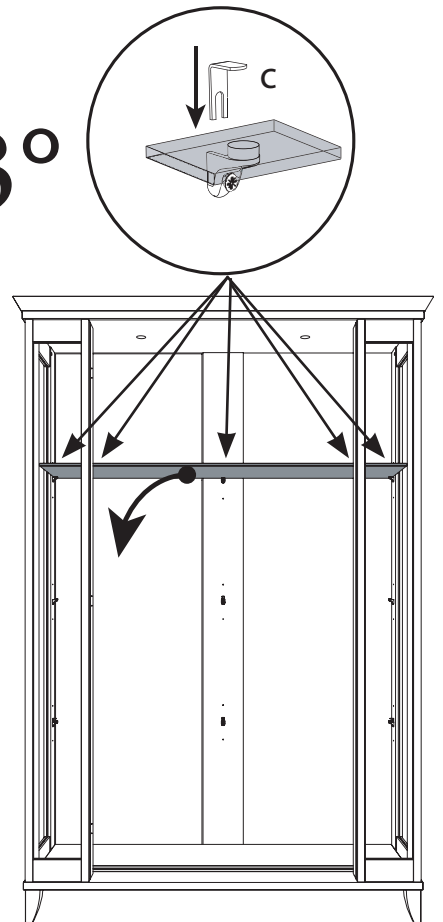


1°

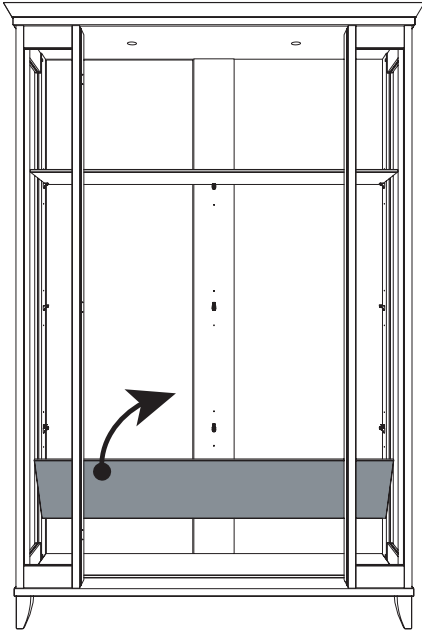


2°

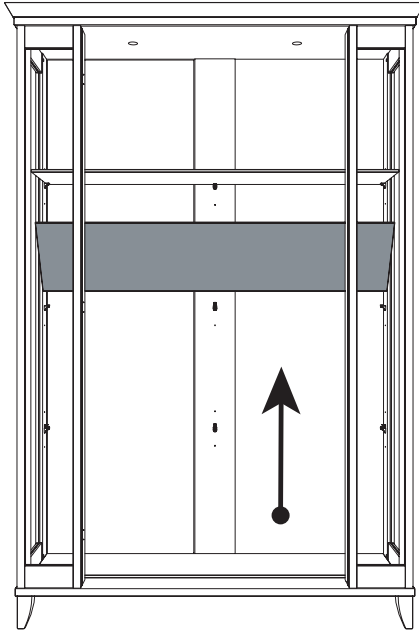


3°

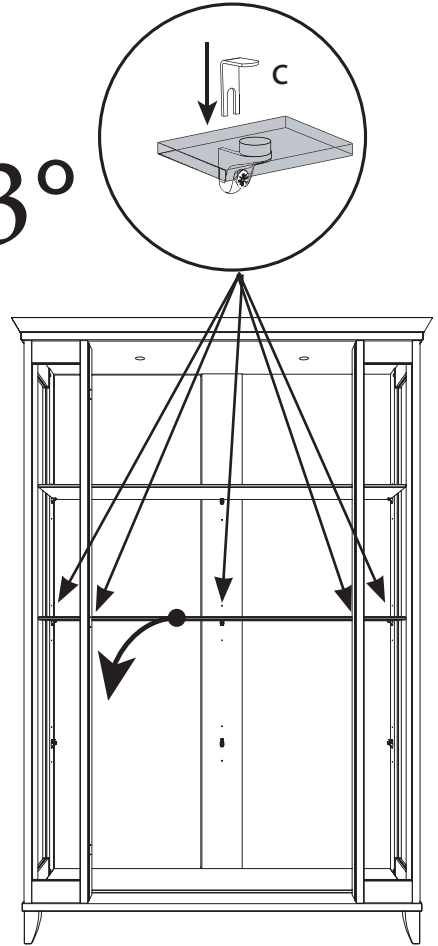


1°

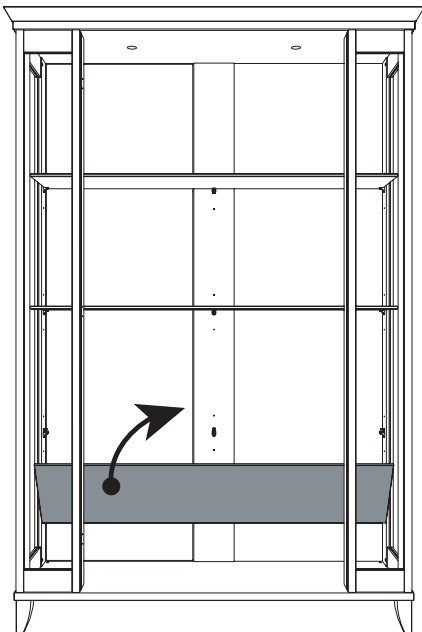


2°


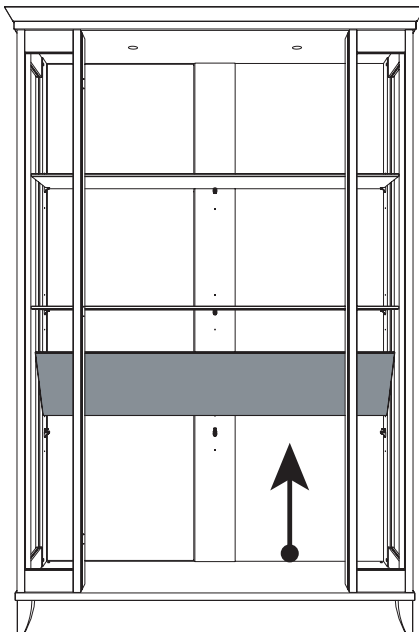


3°






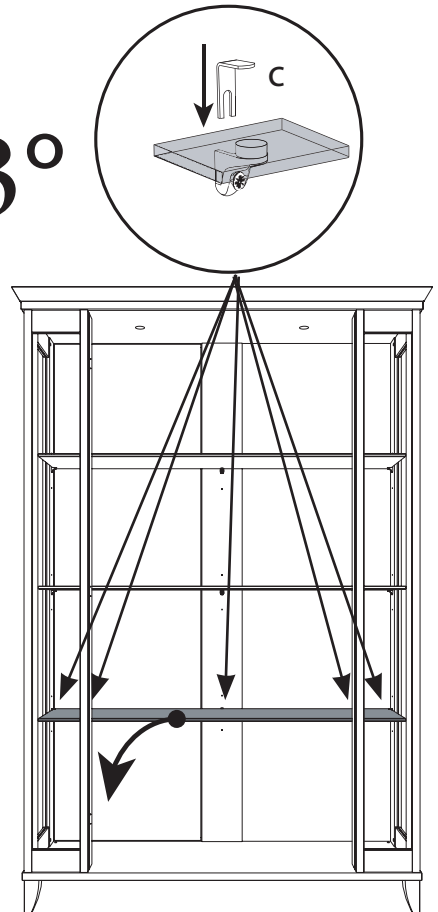


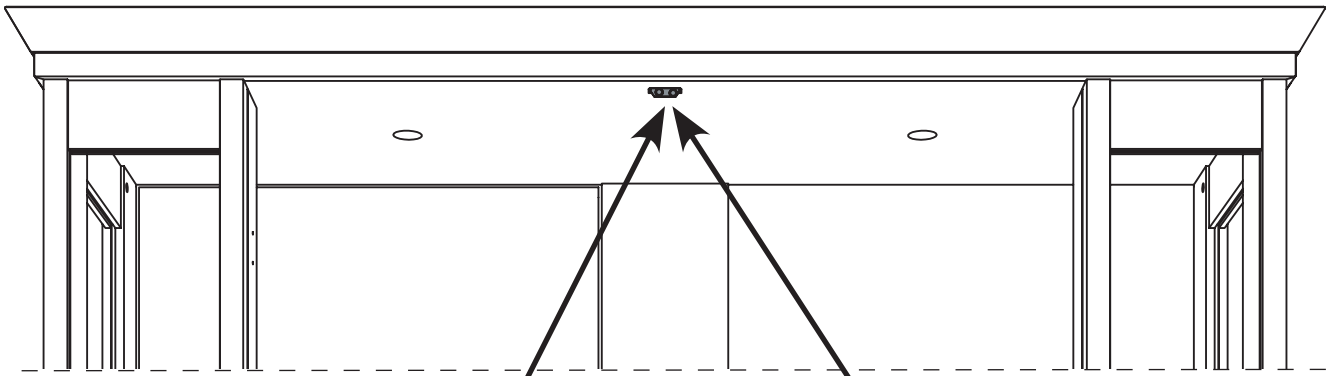




1°

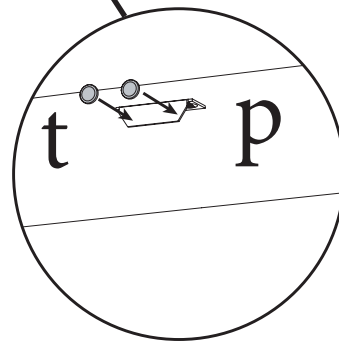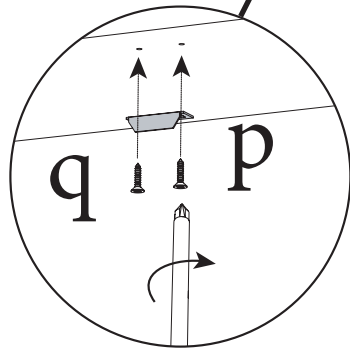

2°

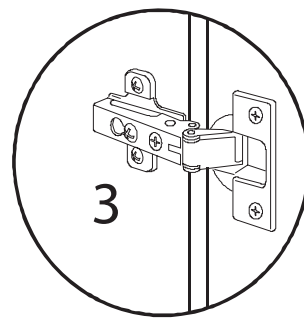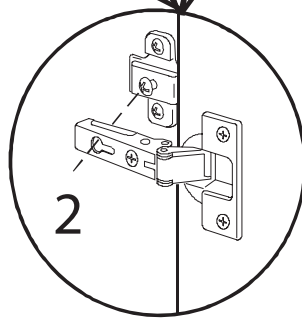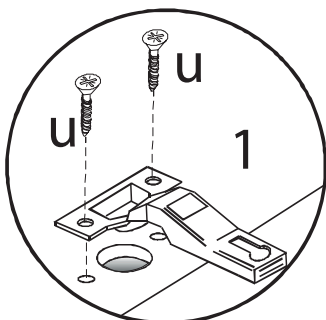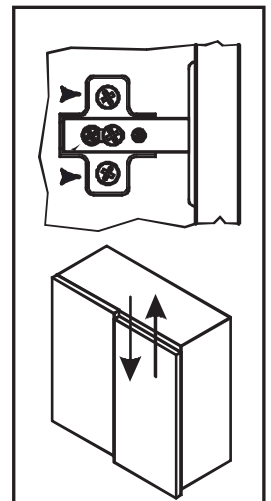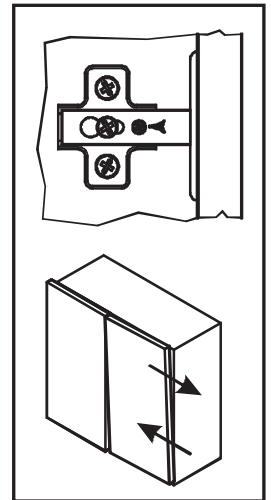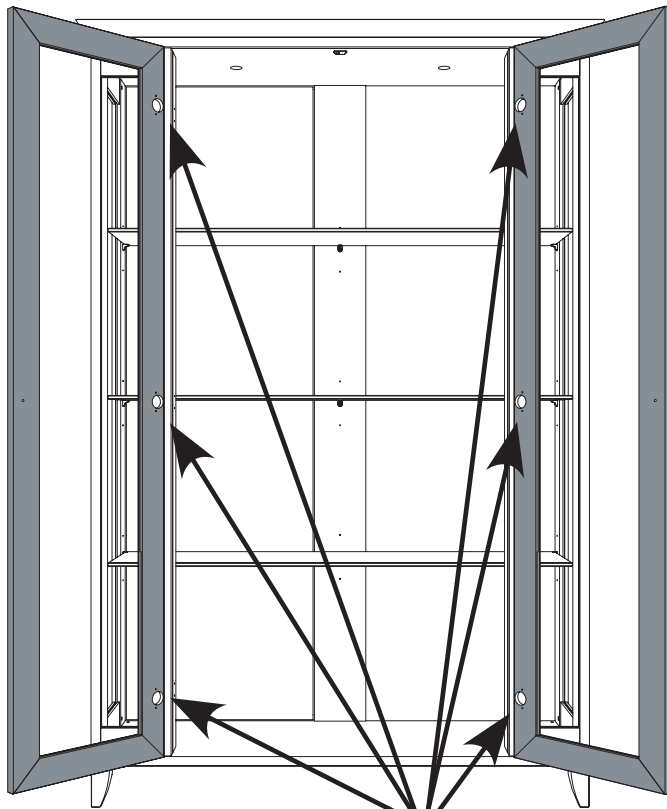

20

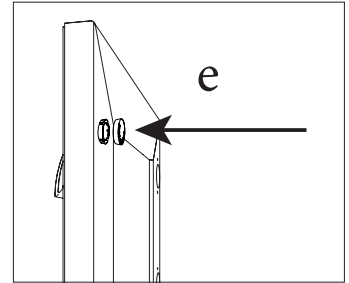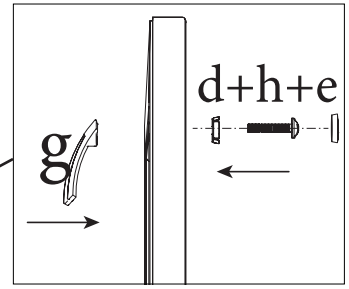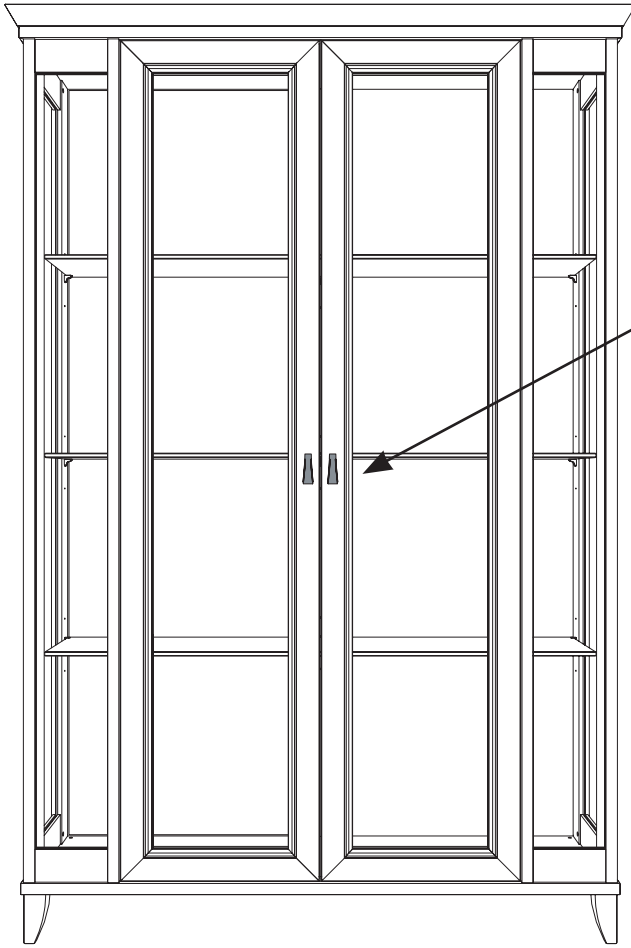

21

