camelgroup©

Made in Italy

ITALIER

www.italier.cz | info@italier.cz | +420 774 431 196

AIDA
6 DOORS WARDROBE

| A (x16) | B (x2) | C (x16) | D (x6) | E (x12) | F (x8) H6 |
| G (x16) H0 | I (x8) C0 | L (x16) C8 | M (x74) 18mm | O (x6) | P (x6) |

IMPORTANT:
Larger holes must be in this position!
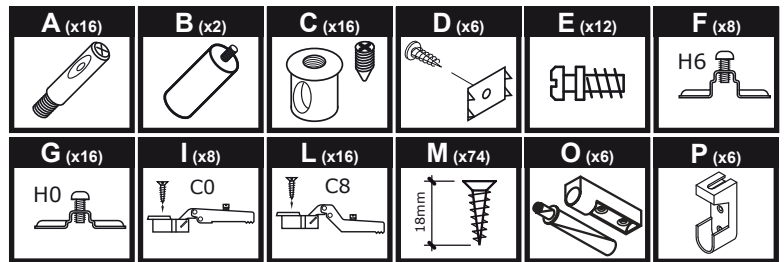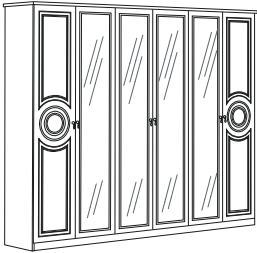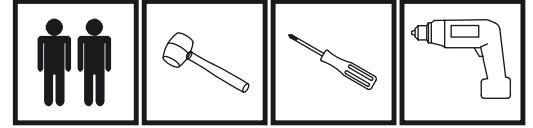
1) Screw the plate for the hinge on the left facing side of the dividing panel;
2) On opposite side of the dividing panel screw VERY TIGHT the plate for the hinge.

ASSEMBLING AND ADJUSTING OF DOOR

A: Lay a piece of cardboard over the floor for protection of shining surfaces.

B: Join side panels and dividing panel to the base see hardware (A), (B), (C) for the proper   pegs and eccentrics.

C: Slide back panels along the pre-groved sides.

D: First fix the top and then fix back panels with metal brackets (D).

E: Fix shelves with their shelf supports (E).

F: Fix doors with hinges as per drawing and adjust them as per instructions.
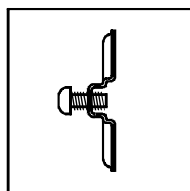
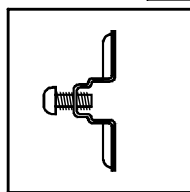**G**: Fix door stoppers (O).

PLATE for HINGE h0

CERN. COLLO 0

EXTERNAL LATERAL DOORS

1
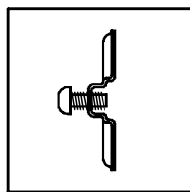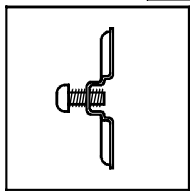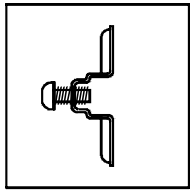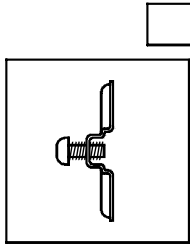
PLATE for HINGE h6

CERN. COLLO 8

PLATE for HINGE h0

CERN. COLLO 8

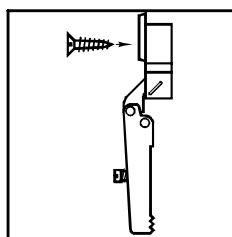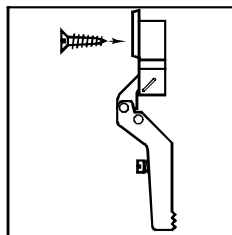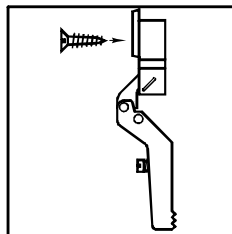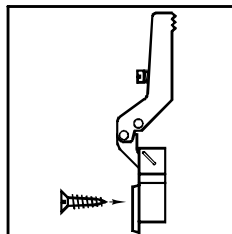
INTERNAL LATERAL DOORS

2

CENTRAL GLASS DOORS

3

PLATE for HINGE h0

CERN. COLLO 8

CENTRAL GLASS DOORS

3

PLATE for HINGE h6

CERN. COLLO 8

INTERNAL LATERAL DOORS

2

PLATE for HINGE h0

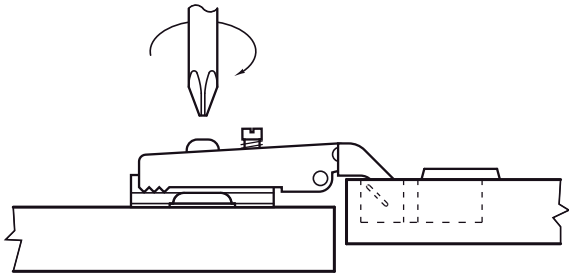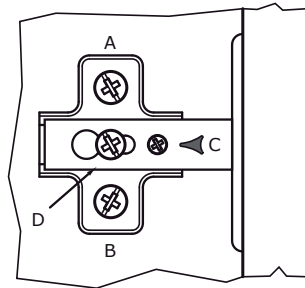CERN. COLLO 0
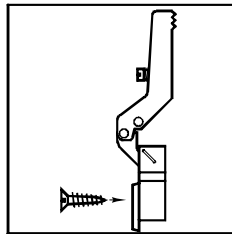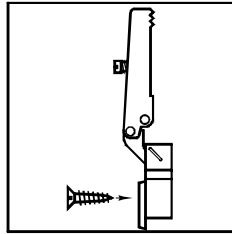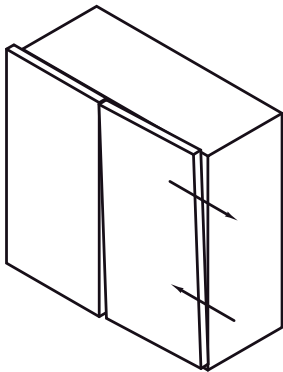

EXTERNAL LATERAL DOORS

1
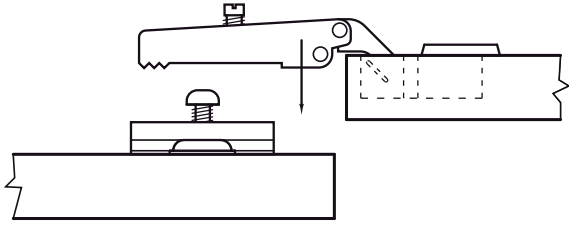
INSERT THE DOORH INGESO VERT HE PLAQUE
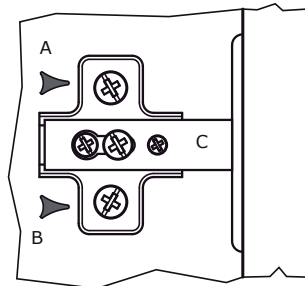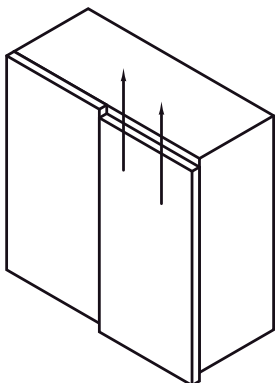ALREADYF IXED ON THES IDEP ANELS ANDP ARTITION

NOWF IX THEH INGESW ITHT HE SCREW

DOORS ADJUSTMENT

EXAMPLE1
TO ADJUST THE DOORSO PERATE ON THE
SPECIAL SCREW(C)

A

C

D

B

EXAMPLE2
UNSCREWT HE SCREWS (A+B)A ND ADJUST
THE DOORSI NT HE RIGHTP OSITION

A

C

B